

如何换电路板 12/2/2015

{ How to Replace Processor Board [6 Speed] }

1. 断开电源。(Cut off Power)



开关斜装的机型 (Switch Tilted)



开关平装的机型 (Switch Level)

装 6 速电路板的机器开关有两种, 一种是平装, 另一种是斜装。电路板都在装开关的板的后面。

(There are two type of switch assembled, level and tilted. Processor Board placed behind switch.)

2. 取下 Baffle, 拔掉风机和机器的电源插头。(Take off Baffle, Pull out Power Plug and Blower plug.)



拔掉风机和电源插头
(Pull out Power Plug and Blower plug)



拧螺丝, 拆下装电路板盒的铁板
(Disconnect processor board box panel)

3. 拧螺丝, 拆下装电路板盒的铁板。(Disconnect processor board box panel)



取出装电路板的盒子
(Pull out processor board box)




打开盒子取出电路板
(Open Box, take out processor board)

4. 打开电路板盒盖, 找到并松开电路板的固定螺丝。取出电路板。(Open Box, take out processor board)

5. 拆旧电路板换新电路板: (Disconnect Old processor board, replace new one.)

注意：逐个拔下接线插头。用笔记住插的位置。或者每从旧板拔一个插头，马上就把它插到新版同一个位置上。如果忘了，可以参考下图。Note: one by one pull out plug. Write down plug place with ball pen or pull one plug form old board right now put one plug on new board)

插头颜色和位置如下： Wire Color and place as follows:

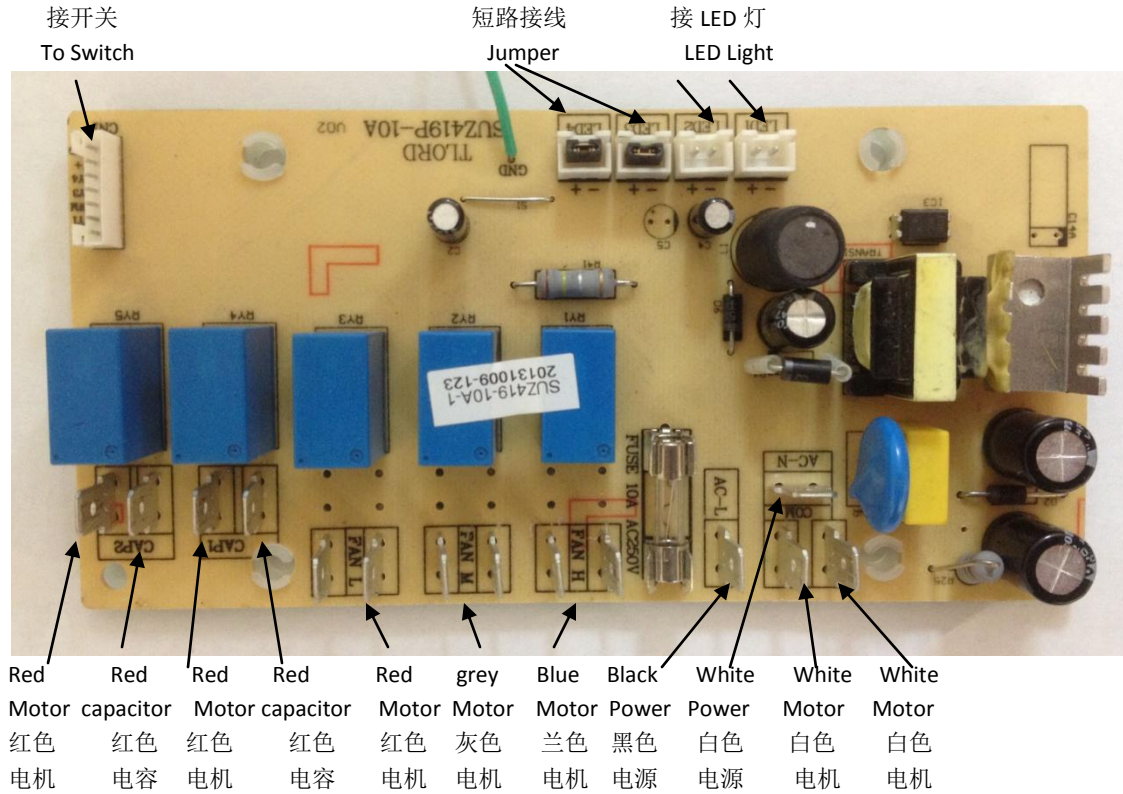

6. 全部接线接好后。把电路板装回到盒里并固定。装上盒盖。
When all wires connected put back processor board into box and fix it. Cover box.
7. 把装电路板盒的铁板装回原来位置。
Put back box panel.
8. 接通电源, 按开关检查机器运转情况。
Connect AC power, check hood operation.