



## KOBE Range Hoods


*"So Quiet...You Won't Believe It's On!"*

### CH00 SQB-1 Parts Location and Replacement

*This basic guide is to show the parts location of the CH00 SQB-1 and how to remove or install certain parts.  
To see more detailed guidelines, please visit: [Kobe Service and Repair](#)*

*For under cabinet models: CH0030SQB-1, CH0036SQB-1, CH0042SQB-1, CH0048SQB-1  
For wall mount models: CH0030SQB-WM-1, CH0036SQB-WM-1, CH0042SQB-WM-1, CH0048SQB-WM-1*

#### Overall Snapshot of CH00 SQB-1

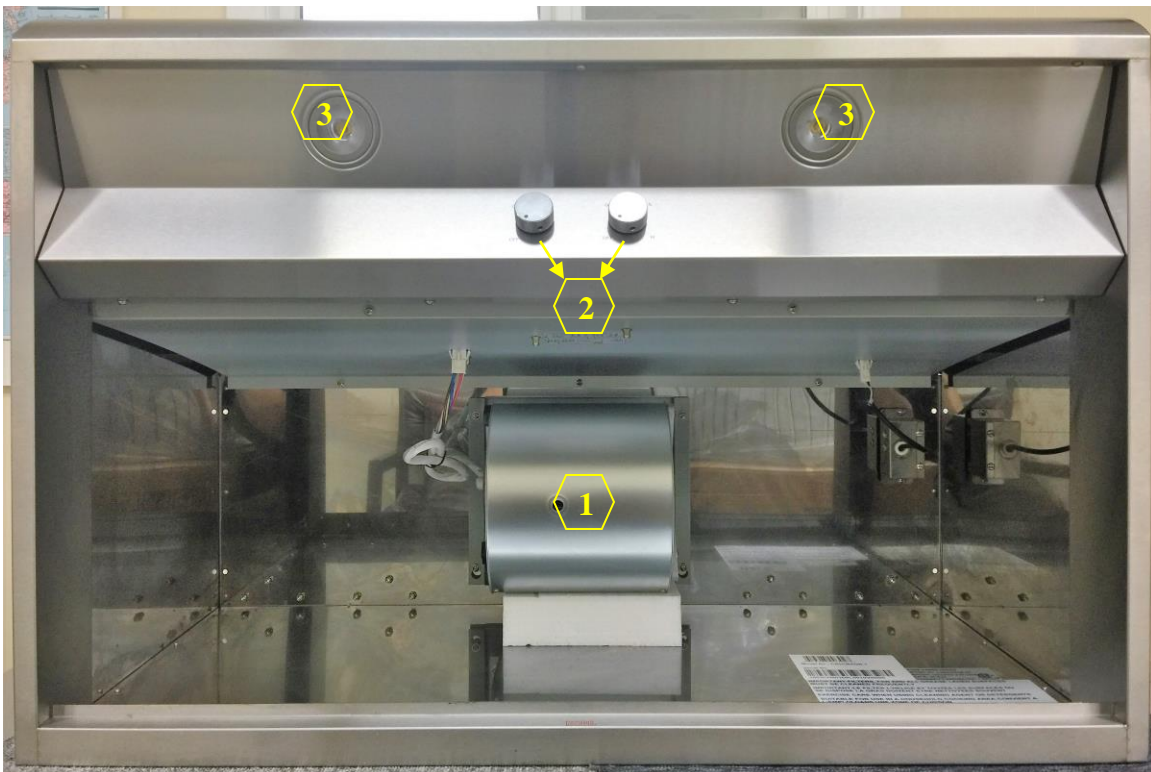

1. Blower System ([Manual](#) Part #4 – See “Parts List” page on manual)
2. Knobs ([Manual](#) Part #11 – See “Parts List” page on manual)
3. LED Light (3W) ([Manual](#) Part #5 – See “Parts List” page on manual)

## Accessing the Capacitor and LED Driver

*Warning: Loosen the screw first with a hand tool screw driver.*



Figure 1



Figure 2



Figure 3

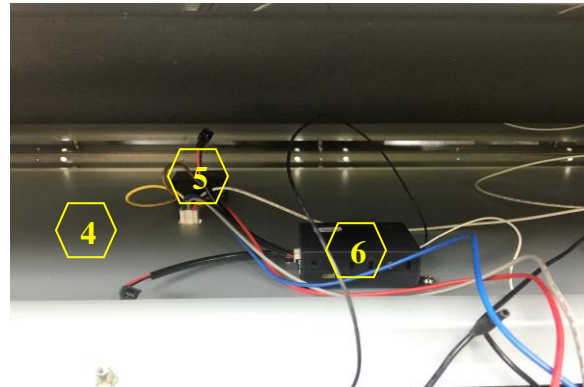


Figure 4

4. Capacitor Panel ([Manual](#) Part #6 – See “Parts List” page on manual)
5. Capacitor ([Manual](#) Part #7 – See “Parts List” page on manual)
6. LED Driver ([Manual](#) Part #8 – See “Parts List” page on manual)



# KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

## Removing the Control Knobs

*Warning: Loosen the screw first with a hand tool screw driver.*



Figure 1



Figure 2



Figure 3

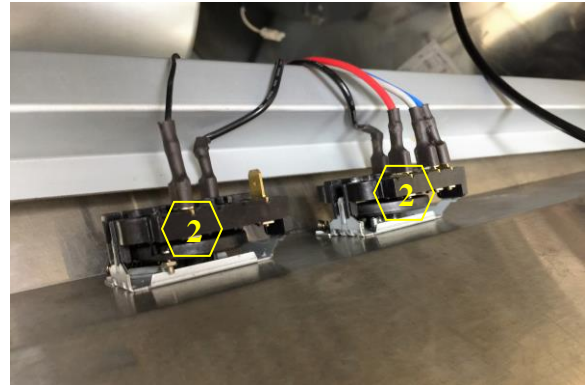


Figure 4

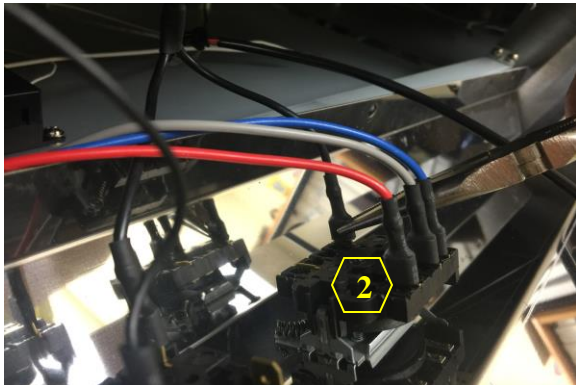


Figure 5



Figure 6



## KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*



Figure 7

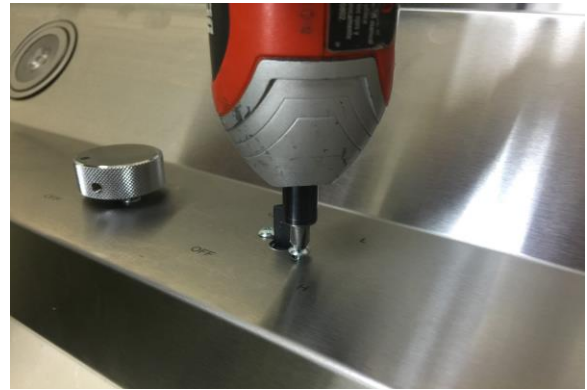


Figure 8



Figure 9

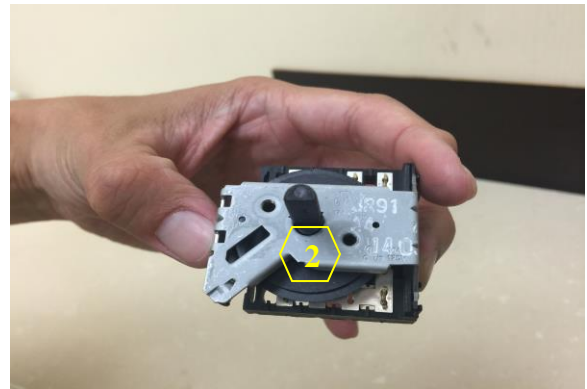


Figure 10

### Accessing the LED Light





# KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

## Removing the Blower System

**Warning:**

1. Loosen the screw first with a hand tool screw driver.
2. Place a support or hold the blower before removing it.

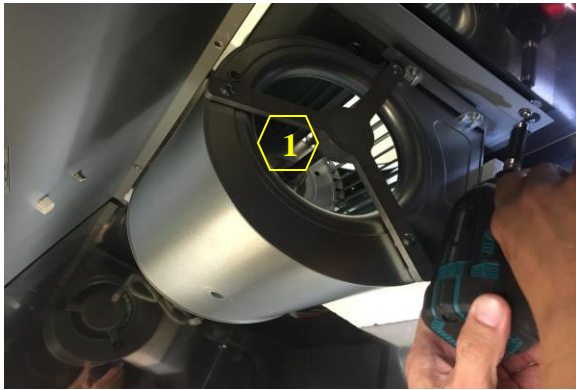


Figure 1



Figure 2



Figure 3

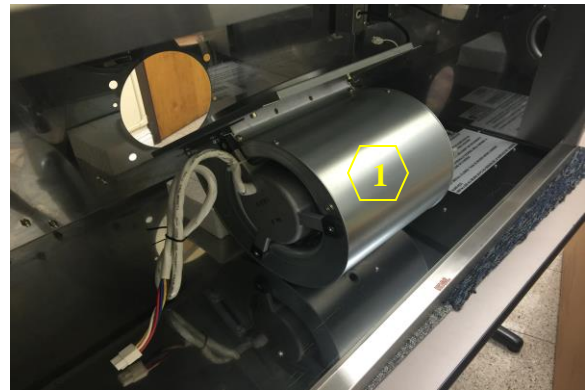


Figure 4

1. Blower System ([Manual](#) Part #4 – See “Parts List” page on manual)