



## KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

### RA28 SQB-1 Parts Location and Replacement

*This basic guide is to show the parts location of the RA28 SQB-1 and how to remove or install certain parts.  
To see more detailed guidelines, please visit: [Kobe Service and Repair](#)*

*For under cabinet models: RA2830SQB-1 and RA2836SQB-1  
For wall mount models: RA2830SQB-WM-1 and RA2836SQB-WM-1*

#### Overall Snapshot of RA28 SQB-1



1. Blower System ([Manual](#) Part #12 – See “Parts List” page on manual)
2. Controls ([Manual](#) Part #s 7, 8, 9, and 10 – See “Parts List” page on manual)
3. LED Light (3W) ([Manual](#) Part #5 – See “Parts List” page on manual)



## KOBE Range Hoods

*“So Quiet...You Won’t Believe It’s On!”*

### Removing the Motor Bracket

*Warning: Loosen the screw first with a hand tool screw driver.*



Figure 1

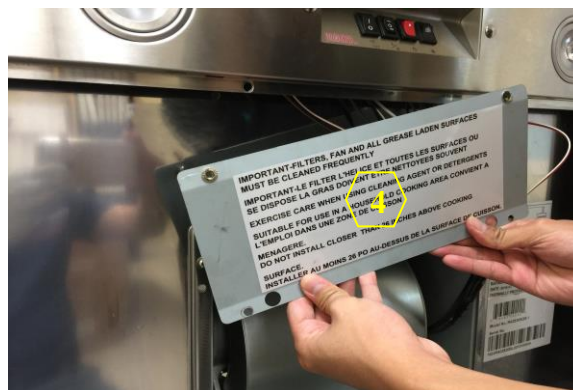


Figure 2

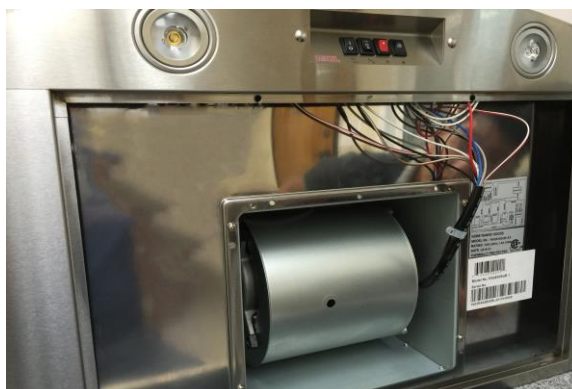


Figure 3


4. Motor Bracket ([Manual](#) Part #11 – See “Parts List” page on manual)



## KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

### Accessing the Capacitor and LED Driver

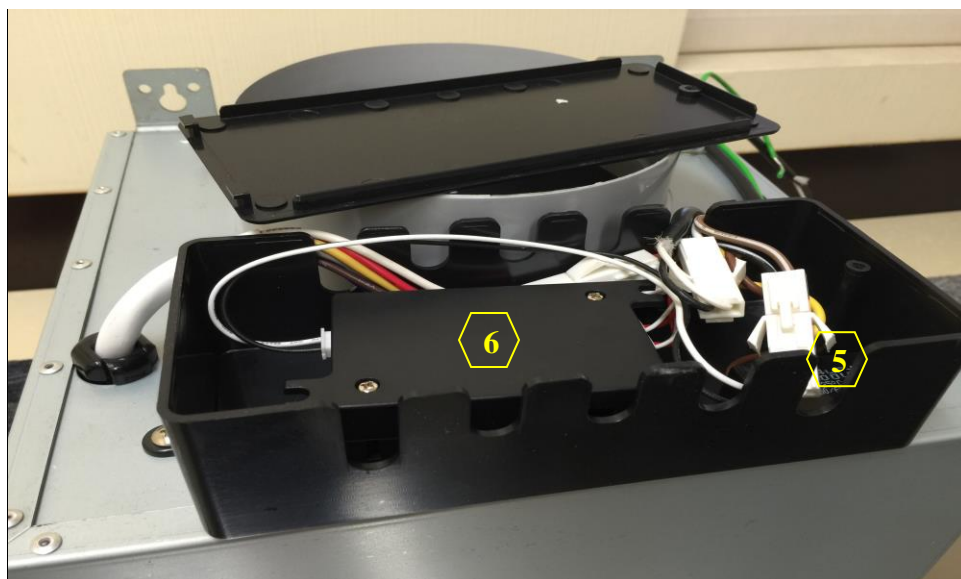

- 5. Capacitor ([Manual](#) Part #2 – See “Parts List” page on manual)
- 6. LED Light Driver ([Manual](#) Part #3 – See “Parts List” page on manual)
- 7. Capacitor Box ([Manual](#) Part #4 – See “Parts List” page on manual)





## KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

### Removing the Control Switches



Figure 1: Removing the switch

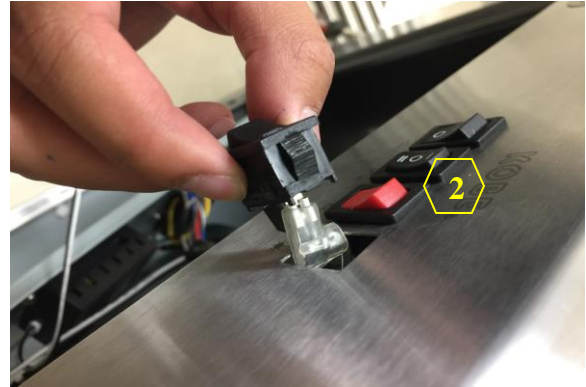


Figure 2

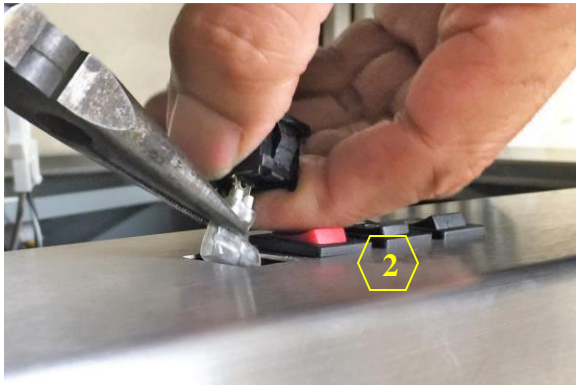


Figure 3

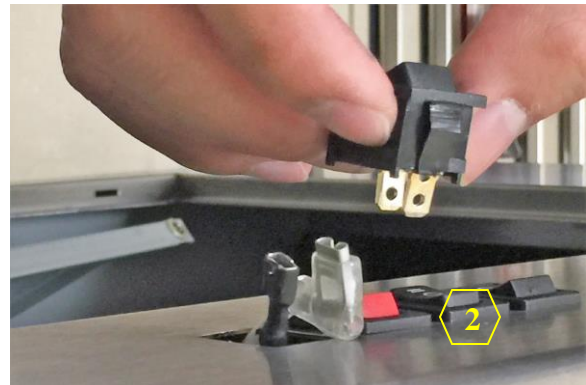


Figure 4

### Accessing the LED Light



For a more detailed guideline,  
visit:

[How to Replace LED Lights](#)



## KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

### Removing the Blower System

**Warning:**

1. Loosen the screw first with a hand tool screw driver.
2. Place a support or hold the blower before removing it.



Figure 1

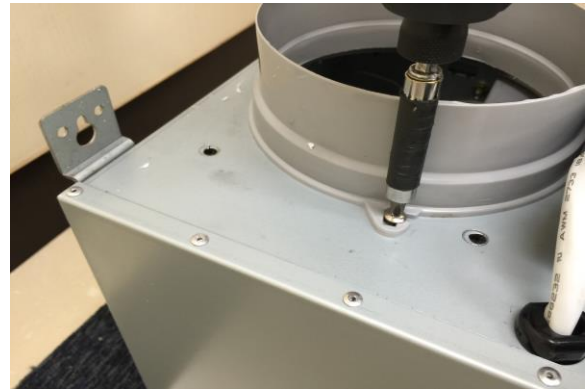


Figure 2

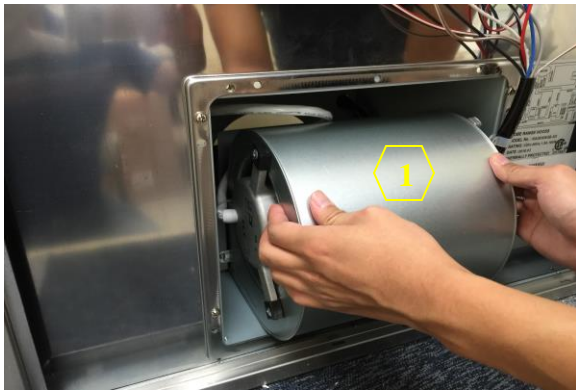


Figure 3

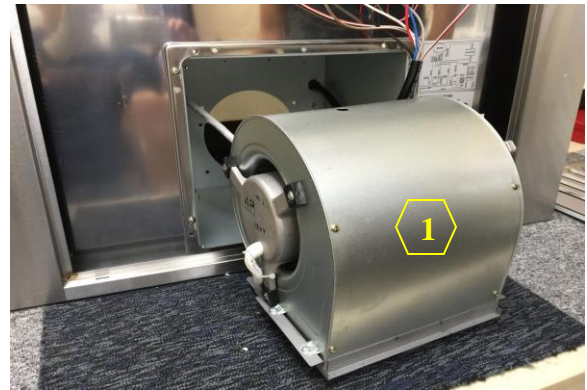


Figure 4

1. Blower System ([Manual](#) Part #12 – See “Parts List” page on manual)