



## KOBE Range Hoods

*"So Quiet ... You Won't Believe It's On!"*


### IN26 SQB-700-2 Parts Location and Replacement

*This basic guide is to show the parts location of the IN26 SQB-700-2 and how to remove or install certain parts.  
To see more detailed guidelines, please visit: [KOBE Service and Repair](#)*

*For 30" model: IN2630SQB-700-2*

*For 36" model: IN2636SQB-700-1*

#### Overall Snapshot of IN26 SQB-700-2

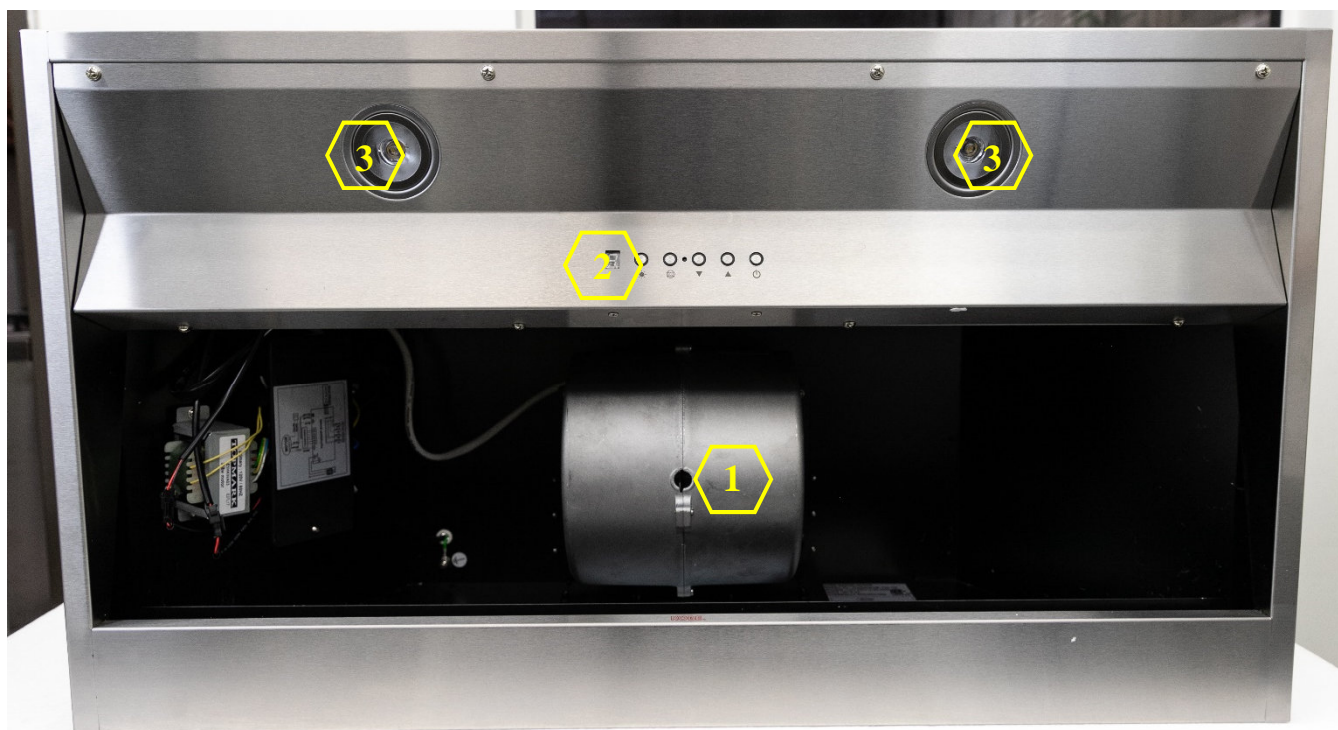

1. Blower System ([Manual](#) Part #11 (30" model), Part #11 (36" model) – See "Parts List" page on manual)
2. Control Unit ([Manual](#) Part #16 (30" model), Part #16 (36" model) – See "Parts List" page on manual)
3. LED Light (3W) ([Manual](#) Part #18 (30" model), Part #18 (36" model) – See "Parts List" page on manual)



## KOBE Range Hoods

*"So Quiet ... You Won't Believe It's On!"*

### Accessing the Capacitor and Processor Board



Figure 1

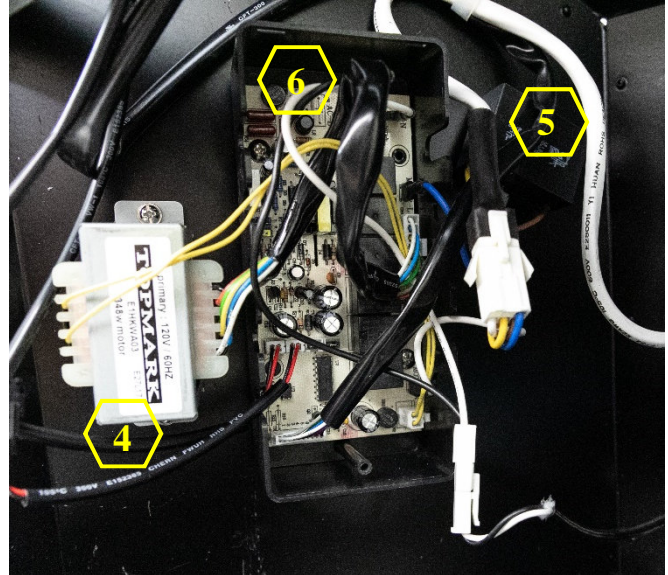


Figure 2

4. Motor Transformer ([Manual](#) Part #6 (30" model), Part #6 (36" model) – See "Parts List" page on manual)
5. Capacitor ([Manual](#) Part #9 (30" model), Part #9 (36" model) – See "Parts List" page on manual)
6. Processor Board ([Manual](#) Part #7 (30" model), Part #7 (36" model) – See "Parts List" page on manual)



# KOBE Range Hoods

*“So Quiet ... You Won’t Believe It’s On!”*

## Accessing the Control Unit

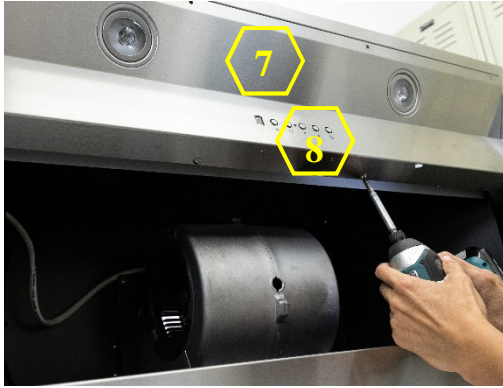


Figure 1

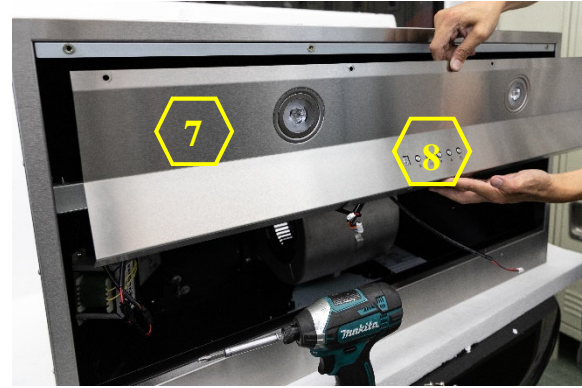


Figure 2



Figure 3

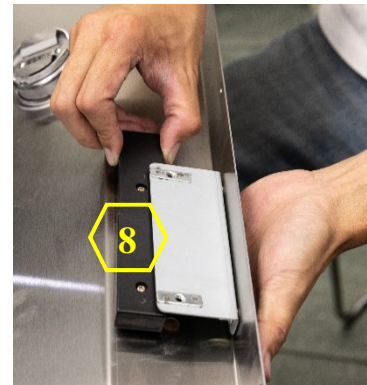


Figure 4

7. Light Panel Support ([Manual](#) Part #17 (30” model), Part #17 (36” model) – See “Parts List” page on manual)
8. Control Unit ([Manual](#) Part #16 (30” model), Part #16 (36” model) – See “Parts List” page on manual)

## Accessing the LED Light



---

**Warning:** For the process above, loosen the screw first with a hand tool screw driver.

---

For a more detailed guideline, visit [How to Replace LED Lights](#)





# KOBE Range Hoods

*"So Quiet ... You Won't Believe It's On!"*

## Removing the Blower System

**Warning:**

1. Loosen the screw first with a hand tool screw driver.
2. Place a support or hold the blower before removing it.



Figure 1

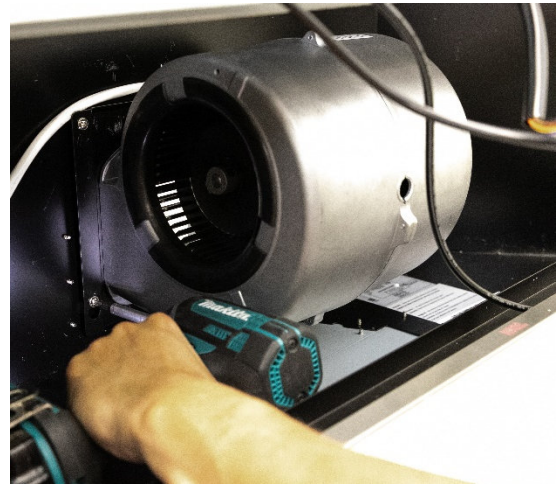


Figure 2



Figure 3

1. Blower System ([Manual](#) Part #11 (30" model), Part #11 (36" model) – See "Parts List" page on manual)