

KOBE Range Hoods

"So Quiet...You Won't Believe It's On!"

CH91 SQB-1 Parts Location and Replacement

This basic guide is to show the parts location of the CH91 SQB-1 and how to remove or install certain parts. To see more detailed guidelines, please visit: <u>Kobe Service and Repair</u>

For under cabinet models: CH9130SQB-1, CH9136SQB-1, CH9142SQB-1, CH9148SQB-1 For wall mount models: CH9130SQB-WM-1, CH9136SQB-WM-1, CH9142SQB-WM-1, CH9148SQB-WM-1

Overall Snapshot of CH91 SQB-1

Plastic Oil Tunnel (<u>Manual</u> Part #16 – See "Parts List" page on manual)
Safety Screen (<u>Manual</u> Part #17 – See "Parts List" page on manual)
LED Light (3W) (<u>Manual</u> Part #6 – See "Parts List" page on manual)



Removing the Capacitor Support

Warning: 1. Loosen the screw first with a hand tool screw driver. 2. When pulling the wires from the capacitor support, press the 'push release' at the back of the cord.



Figure 1



Figure 2



Figure 3

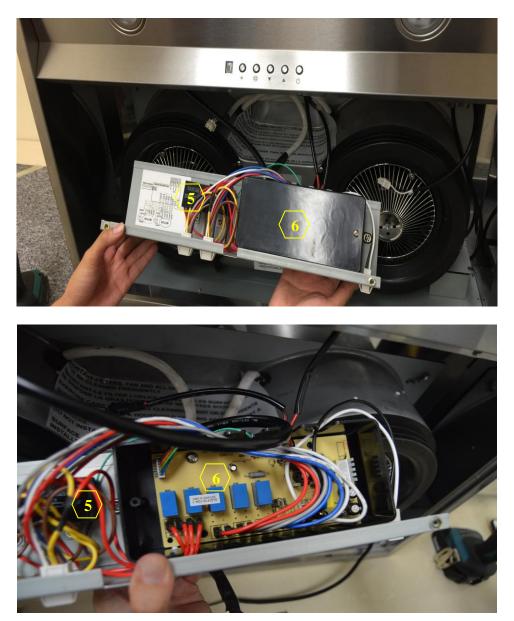


Figure 4

4. Capacitor Support (<u>Manual</u> Part #9 – See "Parts List" page on manual)



Accessing the Processor Board



5. Capacitor 2 pcs (Manual Part #10 – See "Parts List" page on manual) 6. Processor Board (Manual Part #15 – See "Parts List" page on manual)

> For a more detailed guideline, visit: How to Replace Processor Board

> > Page 3 of 9 Version 20160725



Accessing the Control Unit



Figure 1



Figure 3



Figure 2

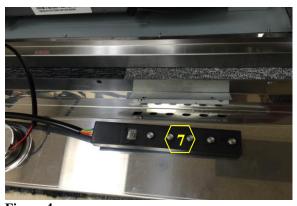


Figure 4 7. Control Unit (Manual Part #8 – See "Parts List" page on manual) For a more detailed guideline, visit: How to Replace Control Panel

Warning: For the process above, loosen the screw first with a hand tool screw driver.

Accessing the LED Light



For a more detailed guideline, visit: How to Replace LED Lights

Page 4 of 9 Version 20160725



Removing the Impeller



Figure 1



Figure 3



Figure 5



Figure 2



Figure 4



Figure 6

8. Turbine Impeller (Manual Part #13 and #14 – See "Parts List" page on manual) 9. Motor (Manual Part #11 and #12 – See "Parts List" page on manual)

> Page 5 of 9 Version 20160725



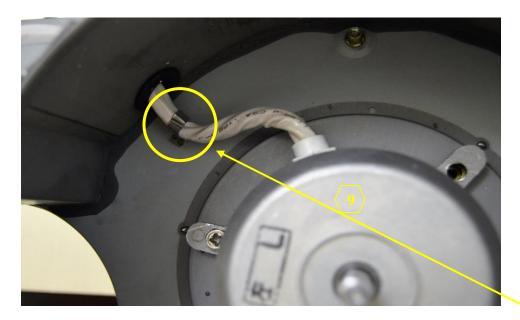
Removing the Motor

Warning: Loosen the screw first with a hand tool screw driver.





Attaching Back the Motor



Note: When placing back the motor, make sure that the wire is properly placed underneath the metal wiring guard. This is to prevent the wire from turning loose and hitting the turbine impeller.

> Page 6 of 9 Version 20160725



Attaching Back the Impeller



Figure 1





Figure 2



Figure 3

Warning: Do not overtighten the nut.



Figure 5

Note: When attaching back the impeller, make sure that the open tube in the middle of the impeller is aligned evenly to the metal rod in the center of the motor. The metal rod should not be sticking out of the tube.

> Page 7 of 9 Version 20160725



More on attaching the impeller:

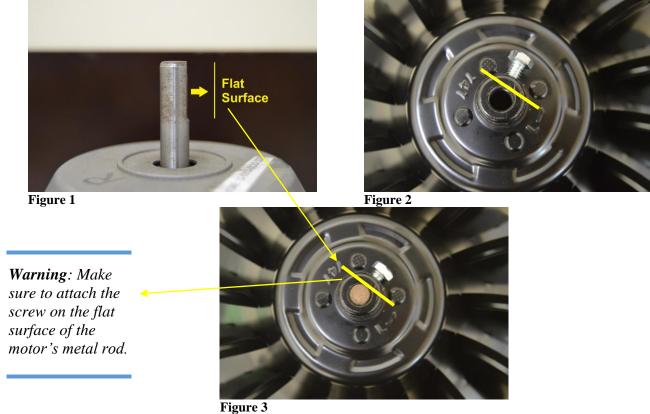




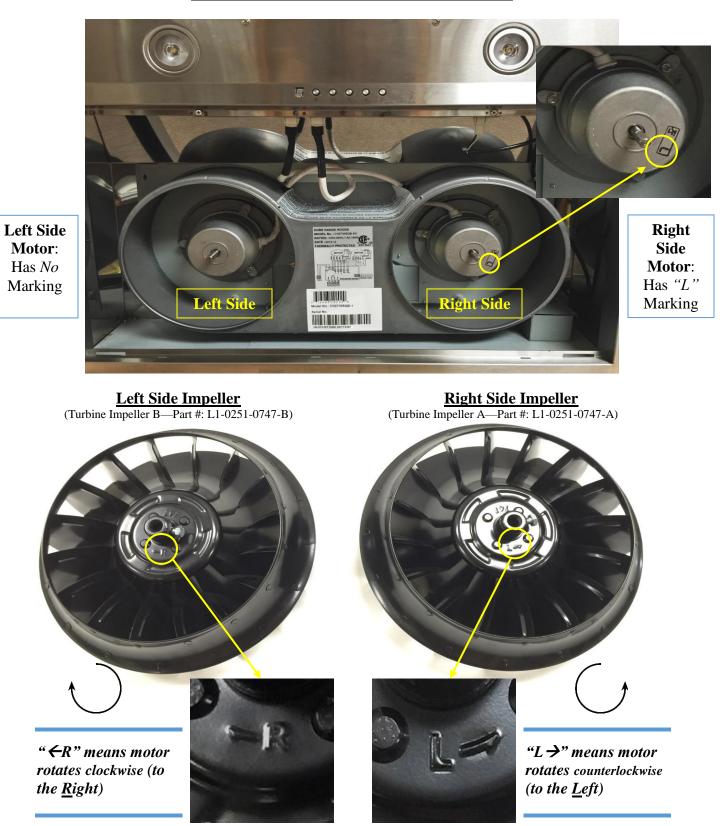


Figure 4

Page 8 of 9 Version 20160725



Placing the Impellers in their Correct Positions



Page 9 of 9 Version 20160725