



KOBE Range Hoods

"So Quiet...You Won't Believe It's On!"

IN26 SQB-1200 Parts Location and Replacement

*This basic guide is to show the parts location of the IN26 SQB-1200 and how to remove or install certain parts.
To see more detailed guidelines, please visit: [Kobe Service and Repair](#)*

For models: IN2636SQB-1200, IN2642SQB-1200, IN2648SQB-1200

Overall Snapshot of IN26 SQB-1200



1. Blower System ([Manual](#) Part #6 – See “Parts List” page on manual)
2. Control Unit ([Manual](#) Part #13 – See “Parts List” page on manual)
3. LED Light (3W) ([Manual](#) Part #15 – See “Parts List” page on manual)



KOBE Range Hoods

"So Quiet...You Won't Believe It's On!"

Removing the Electric Component Support to Access Capacitor and Processor Board

Warning:

1. Loosen the screw first with a hand tool screw driver.
2. It is better to remove the blower first for easier access to the inner-most screw.



Figure 1

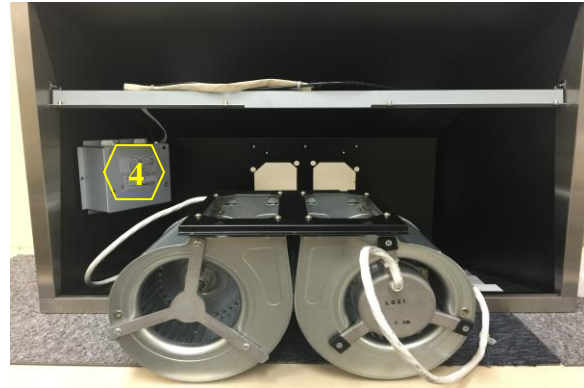


Figure 2

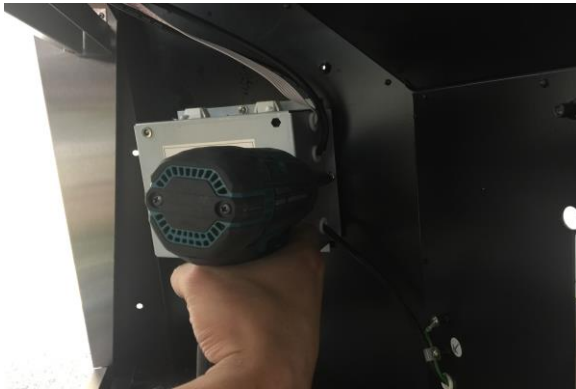


Figure 3

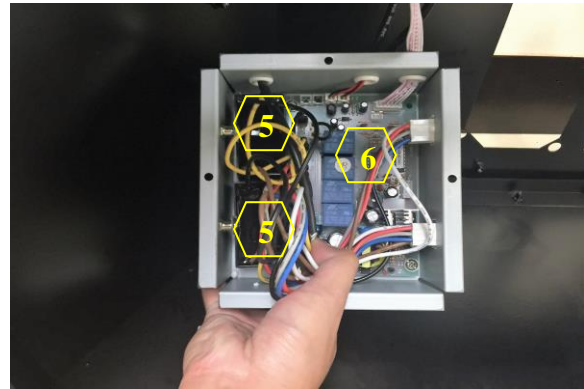


Figure 4

4. Electric Component Support ([Manual](#) Part #4 – See “Parts List” page on manual)
5. Capacitor ([Manual](#) Part #3 – See “Parts List” page on manual)
6. Processor Board ([Manual](#) Part #2 – See “Parts List” page on manual)



KOBE Range Hoods

“So Quiet...You Won’t Believe It’s On!”

Removing the Control Unit

Warning: Loosen the screw first with a hand tool screw driver.



Figure 1



Figure 2



Figure 3

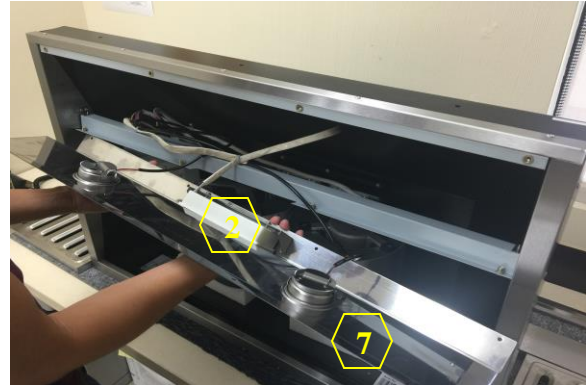


Figure 4

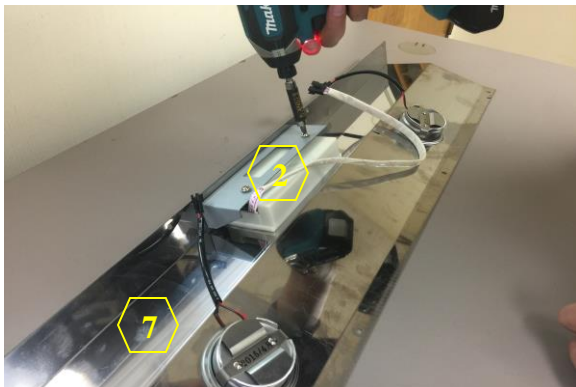


Figure 5

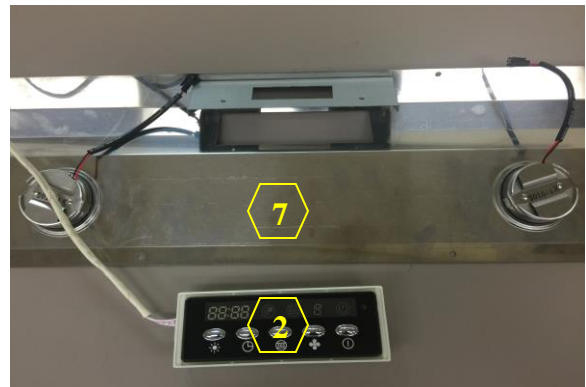


Figure 6

7. Light Panel ([Manual](#) Part #14 – See “Parts List” page on manual)



KOBE Range Hoods

"So Quiet...You Won't Believe It's On!"

Removing the Blower System

Warning:

1. Loosen the screw first with a hand tool screw driver.
2. Place a support or hold the blower before removing it.



Figure 1

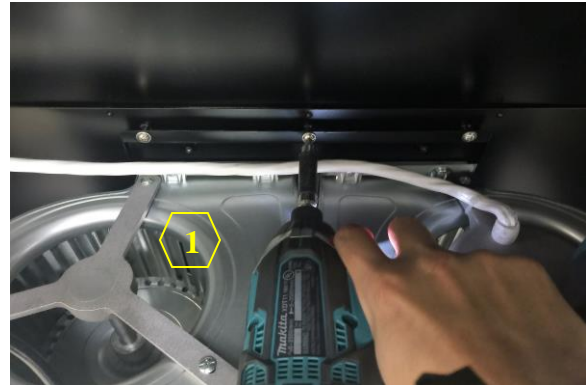


Figure 2



Figure 3

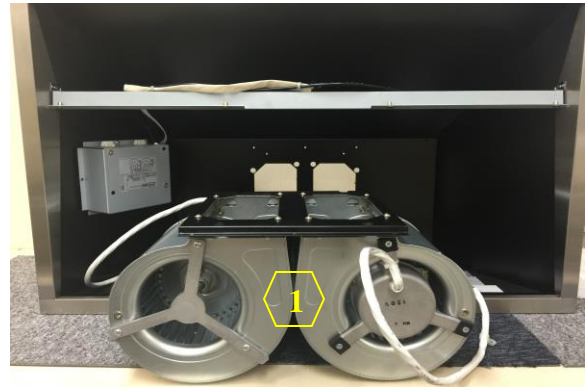


Figure 4

Accessing the LED Light



For a more detailed guideline, visit: [How to Replace LED Lights](#)