

**KOBE Range Hoods** 

"So Quiet...You Won't Believe It's On!"

### **RA38 SQB-1 Parts Location and Replacement**

This basic guide is to show the parts location of the RA38 SQB-1 and how to remove or install certain parts. To see more detailed guidelines, please visit: <u>Kobe Service and Repair</u>

> For under cabinet models: RA3830SQB-1 and RA3836SQB-1 For wall mount models: RA3830SQB-WM-1 and RA3836SQB-WM-1

# 

**Overall Snapshot of RA38 SQB-1** 

Blower System (<u>Manual</u> Part #9 – See "Parts List" page on manual)
Control Switch (<u>Manual</u> Part # 7– See "Parts List" page on manual)
LED Light (3W) (<u>Manual</u> Part #5 – See "Parts List" page on manual)

Page 1 of 5 Version 20160725



#### **<u>Removing the Motor Bracket</u>**

Warning: Loosen the screw first with a hand tool screw driver.



Figure 1



Figure 2





4. Motor Bracket (Manual Part #8 – See "Parts List" page on manual)

Page 2 of 5 Version 20160725



#### Accessing the Capacitor and LED Driver



5. Capacitor Box (<u>Manual</u> Part #4 – See "Parts List" page on manual) 6. LED Light Driver (Manual Part #3 – See "Parts List" page on manual) 7. Capacitor (Manual Part #2 – See "Parts List" page on manual)

> Page 3 of 5 Version 20160725



#### **Removing the Control Switch**



Figure 1



Figure 3



Figure 2

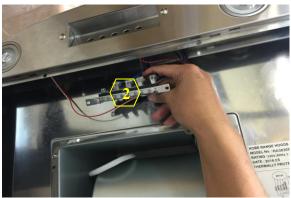


Figure 4

Accessing the LED Light



For a more detailed guideline, visit: How to Replace LED Lights

Page 4 of 5 Version 20160725



#### **<u>Removing the Blower System</u>**

Warning: 1. Loosen the screw first with a hand tool screw driver. 2. Place a support or hold the blower before removing it.



Figure 1



Figure 3


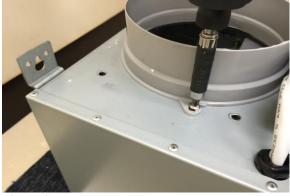


Figure 2



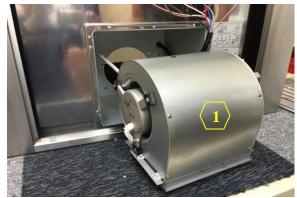

1. Blower System (Manual Part #9 – See "Parts List" page on manual)