

**KOBE Range Hoods** 

"So Quiet...You Won't Believe It's On!"

### **RA92 SQB-1 Parts Location and Replacement**

This basic guide is to show the parts location of the RA92 SQB-1 and how to remove or install certain parts. To see more detailed guidelines, please visit: <u>Kobe Service and Repair</u>

For 30" wall mount models: RA9230SQB-1, RA9230SQB-DC30-1, RA9230SQB-DC46-1 For 36" wall mount models: RA9236SQB-1, RA9236SQB-DC30-1, RA9236SQB-DC46-1



#### **Overall Snapshot of RA92 SQB-1**

Blower System (<u>Manual</u> Part #7 – See "Parts List" page on manual)
Control Panel (<u>Manual</u> Part #5– See "Parts List" page on manual)
LED Light (3W) (<u>Manual</u> Part #4 – See "Parts List" page on manual)



#### **Removing the Capacitor Support**

Warning: 1. Loosen the screw first with a hand tool screw driver. 2. When pulling the wires from the capacitor support, press the 'push release' at the back of the cord.



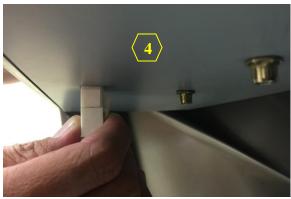


Figure 1

Figure 2

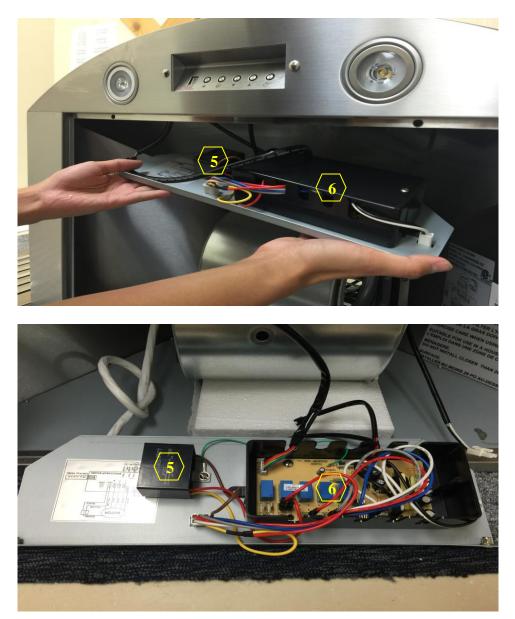


Figure 3

4. Capacitor Support (Manual Part #8 – See "Parts List" page on manual)



#### Accessing the Capacitor and Processor Board



5. Capacitor (Manual Part #10 – See "Parts List" page on manual) 6. Processor Board (Manual Part #9 – See "Parts List" page on manual)


> Page 3 of 5 Version 20160725



#### **Removing the Control Panel**





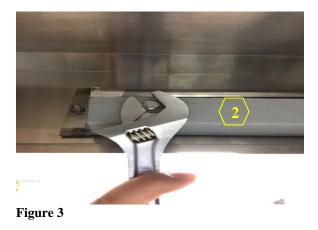

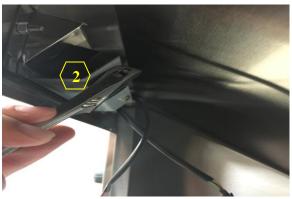


Figure 2



Figure 4

Accessing the LED Light



For a more detailed guideline, visit: How to Replace LED Lights

Page 4 of 5 Version 20160725



#### **<u>Removing the Blower System</u>**

Warning: 1. Loosen the screw first with a hand tool screw driver. 2. Place a support or hold the blower before removing it.



Figure 1



Figure 2



Figure 3



Figure 4

1. Blower System (Manual Part #7 – See "Parts List" page on manual)