

### **KOBE Range Hoods**

"So Quiet...You Won't Believe It's On!"

### **RA94 SQB-1 Parts Location and Replacement**

This basic guide is to show the parts location of the RA94 SQB-1 and how to remove or install certain parts.

To see more detailed guidelines, please visit: Kobe Service and Repair

For 30" wall mount models: RA9430SQB-1, RA9430SQB-DC30-1, RA9430SQB-DC46-1 For 36" wall mount models: RA9436SQB-1, RA9436SQB-DC30-1, RA9436SQB-DC46-1

#### **Overall Snapshot of RA94 SQB-1**



- 1. Blower System (Manual Part #7 See "Parts List" page on manual)
- 2. Control Panel (Manual Part #5 See "Parts List" page on manual)
- 3. LED Light (3W) (Manual Part #4 See "Parts List" page on manual)



## KOBE Range Hoods "So Quiet...You Won't Believe It's On!"

#### **Removing the Capacitor Support**

#### Warning:

1. Loosen the screw first with a hand tool screw driver. 2. When pulling the wires from the capacitor support, press the 'push release' at the back of the cord.





Figure 1

Figure 2




Figure 3


4. Capacitor Support (Manual Part #8 – See "Parts List" page on manual)



# KOBE Range Hoods "So Quiet...You Won't Believe It's On!"

### **Accessing the Capacitor and Processor Board**

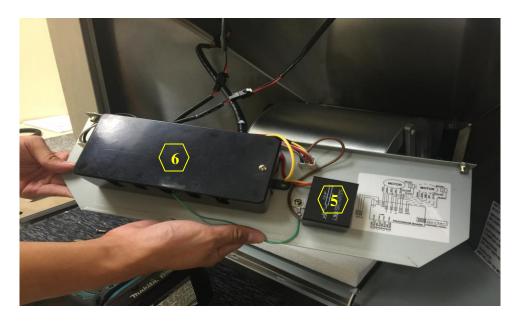

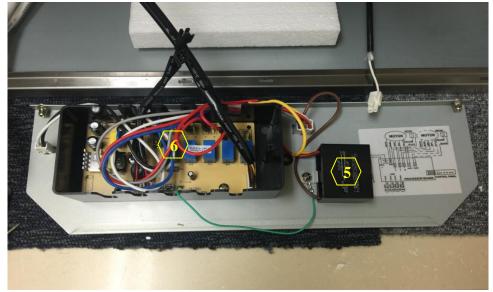

5. Capacitor (Manual Part #10 – See "Parts List" page on manual) 6. Processor Board (Manual Part #9 – See "Parts List" page on manual)



## KOBE Range Hoods "So Quiet...You Won't Believe It's On!"

### **Removing the Control Panel**



Figure 1



Figure 2

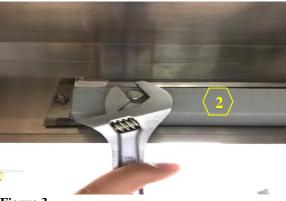


Figure 3



Figure 4

### **Accessing the LED Light**



For a more detailed guideline, visit:

**How to Replace LED Lights** 

Page 4 of 5 Version 20160725



## KOBE Range Hoods "So Quiet...You Won't Believe It's On!"

#### **Removing the Blower System**

#### Warning:

- 1. Loosen the screw first with a hand tool screw driver.
- 2. Place a support or hold the blower before removing it.



Figure 1



Figure 3



Figure 2



Figure 4

1. Blower System (Manual Part #7 – See "Parts List" page on manual)