



## KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

### RAX94 SQB-1 Parts Location and Replacement

This basic guide is to show the parts location of the RAX94 SQB-1 and how to remove or install certain parts.  
To see more detailed guidelines, please visit: [Kobe Service and Repair](#)

For 30" wall mount models: RAX9430SQB-1, RAX9430SQB-DC30-1, RAX9430SQB-DC46-1  
For 36" wall mount models: RAX9436SQB-1, RAX9436SQB-DC30-1, RAX9436SQB-DC46-1

#### Overall Snapshot of RAX94 SQB-1



1. Blower System ([Manual](#) Part #7 – See “Parts List” page on manual)
2. Control Switch ([Manual](#) Part #5 – See “Parts List” page on manual)
3. LED Light (3W) ([Manual](#) Part #4 – See “Parts List” page on manual)



## KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

### Removing the Capacitor Support

**Warning:**

1. Loosen the screw first with a hand tool screw driver.
2. When pulling the wires from the capacitor support, press the 'push release' at the back of the cord.



Figure 1

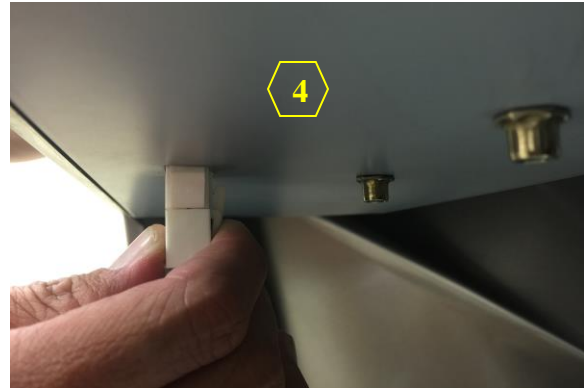


Figure 2



Figure 3


4. Capacitor Support ([Manual](#) Part #8 – See "Parts List" page on manual)



## KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

### Accessing the Capacitor and LED Driver

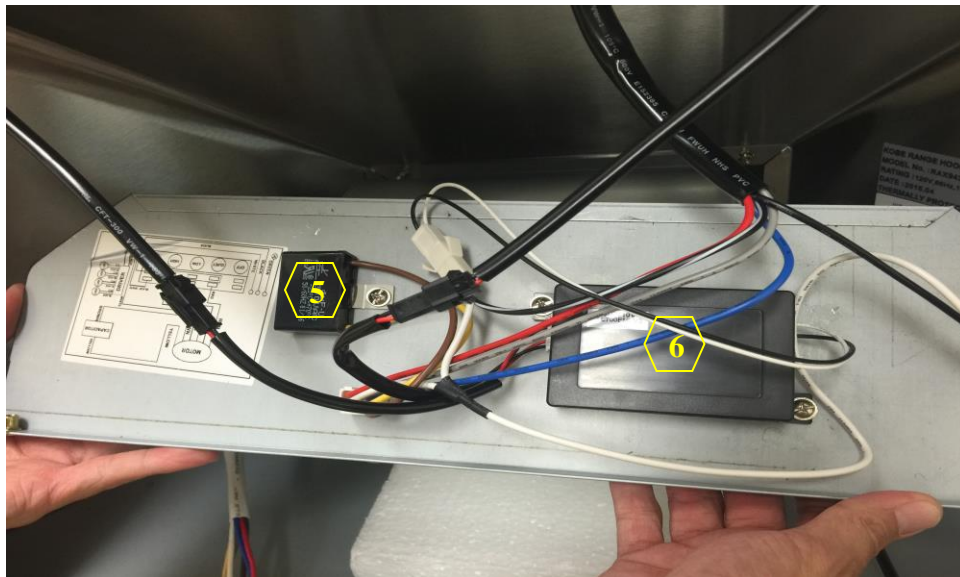

5. Capacitor ([Manual](#) Part #9 – See “Parts List” page on manual)
6. LED Driver ([Manual](#) Part #4 – See “Parts List” page on manual)



# KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

## Removing the Control Switch



Figure 1



Figure 2



Figure 3



Figure 4

## Accessing the LED Light

**Warning:** For the process above, loosen the screw first with a hand tool screw driver.

For a more detailed guideline, visit:

[How to Replace LED Lights](#)







# KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

## Removing the Blower System

**Warning:**

1. Loosen the screw first with a hand tool screw driver.
2. Place a support or hold the blower before removing it.



Figure 1



Figure 2



Figure 3



Figure 4

1. Blower System ([Manual](#) Part #7 – See “Parts List” page on manual)