



# KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

## Electrical Wire Position



*This guide is to show Kobe customers the positioning of the electrical wiring of Kobe range hoods. The images here do not depict the exact appearance of every applicable Kobe models; their sole purpose here is to show the positioning of the electrical wiring. Customers can refer to this document if guidance is needed as to where to place the outlet on the wall or cabinet.*

### Under Cabinet & Multi-Style Hoods

Applies to the following series:

Under Cabinet	Wall Mount
CH22 SQ-1	CH22 SQ-WM-1
CH22 SQB-1	CH22 SQB-WM-1
CH27 SQB-1	CH27 SQB-WM-1
CH77 SQB-1	CH77 SQB-WM-1
CH91 SQB-1	CH91 SQB-WM-1
CHX20 SQB-1	Non-multi-style
CHX22 SQB-1	CHX22 SQB-WM-1
CHX38 SQB-2	CHX38 SQB-WM-2
CHX38 SQBD-3	CHX38 SQBD-WM-3
CHX79 SQB-1	CHX79 SQB-WM-1
CHX91 SQB-1	CHX91 SQB-WM-1

Looking from the back of the range hood, the electrical wires are placed at the top and near the center of the range hood body. For wall mount style, the wires are in the same position and will be inside the duct cover. There are also two knock out holes on the left side (see the image on the right side below) to allow electrical wire to be positioned on the left corner of the range hood if desired.

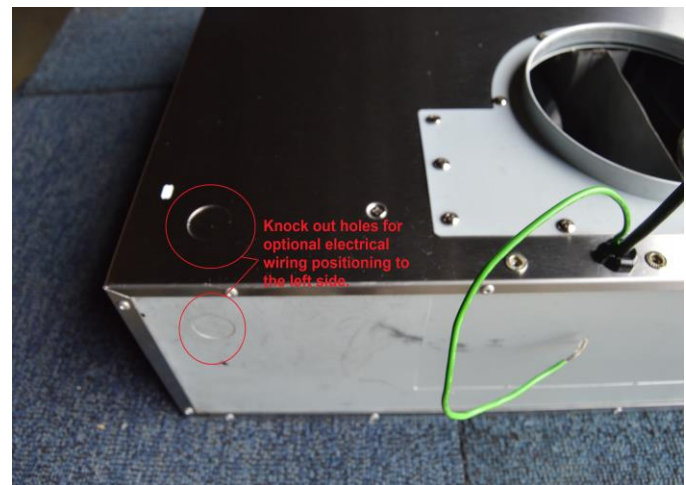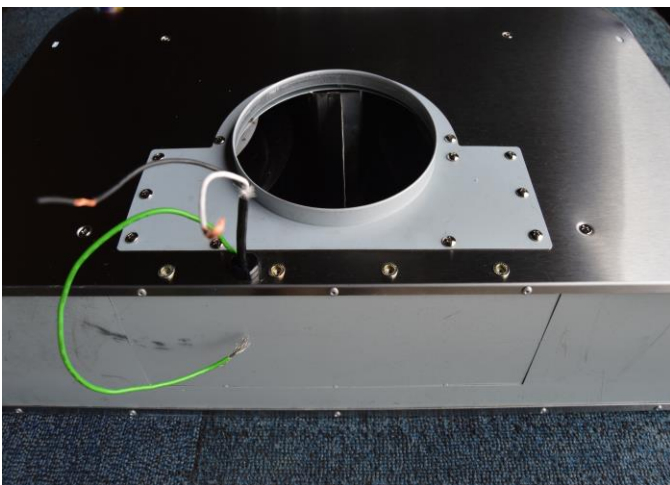




## KOBE Range Hoods

*“So Quiet...You Won’t Believe It’s On!”*

Applies to the following series (non-multi-style): CHX30 PDS-SC, CHX30 PDS-GC, CHX30 PDS-SL, CHX30 PDS-GL

(Left image) Looking from the front of the range hood, the electrical wires are placed at the top and upper-right side of the range hood body. (Right image) Looking from the back of the range hood, the electrical wires are placed at the top and bottom-left side from the center of the range hood body.

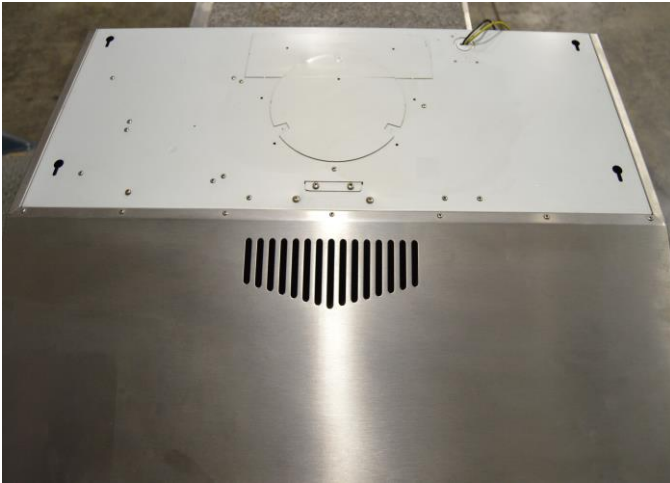


### Multi-Style Hoods

Applies to the following series:

Under Cabinet	Wall Mount
RA38 SQB-1	RA38 SQB-WM-1
RAX21 SQB-1	RAX21 SQB-WM-1
RAX28 SQB-2	RAX28 SQB-WM-2

(Left image) Looking from the back of the range hood, the electrical wires are placed at the top and upper-left of the motor box of the range hood. (Right image) Looking from the front of the range hood, the electrical wires are placed at the top and upper-right of the motor box of the range hood. The electric wires are approximately 12.5” from the bottom of the range hood.

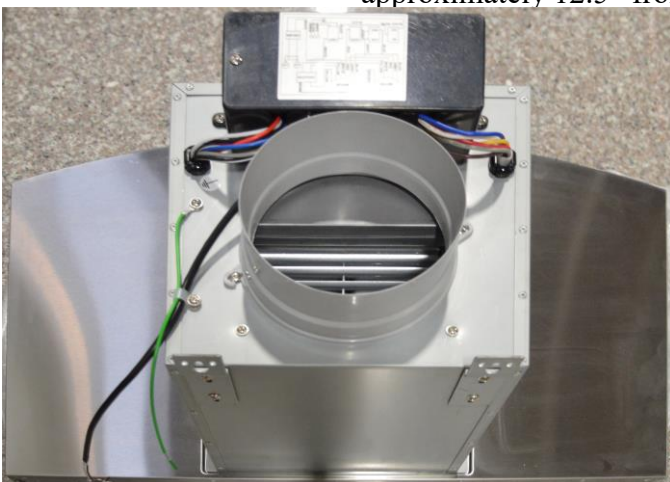



## KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

Applies to the following series:

Under Cabinet	Wall Mount
CH00 SQB-1	CH00 SQB-WM-1


Looking from the front of the range hood, the electrical wires are placed at the top and bottom-right of the range hood body. For wall mount style, these wires will be completely covered by the duct cover.



### Wall Mount Hoods Only

Applies to the following series: CHX81 SQB-1, RA02 SQB-1, RA92 SQB-1, RA94 SQB-1, RAX94 SQB-1, RAX95 SQB-1

(Left image) Looking from the back of the range hood, the electrical wires are placed at the top and upper-left of the range hood body. (Right image) Looking from the front of the range hood, the electrical wires are placed at the top and bottom-right of the range hood body. Please check the diagram found in the manual to determine the height from the bottom of each model's range hood body to the top of the body.

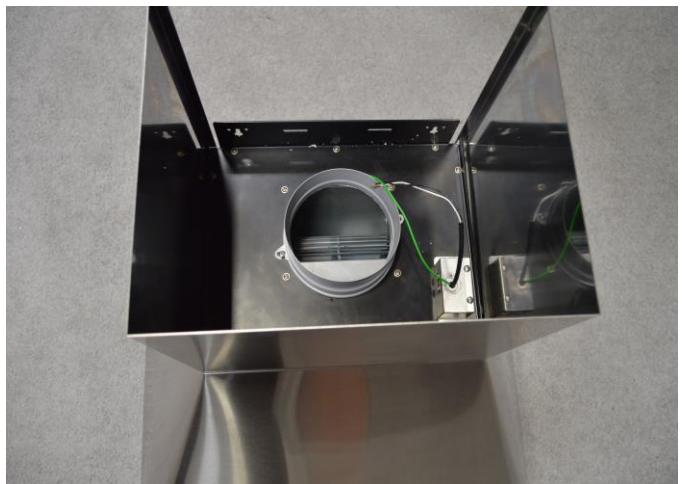



## KOBE Range Hoods

*“So Quiet...You Won’t Believe It’s On!”*

Applies to the following series: RA22 SQB-1

Looking from the front of the range hood, the electrical wires are placed at the top of the motor box of the range hood. This is approximately 15” from the bottom of the range hood. Note that for this series, the motor box will be covered by a duct cover.



### Built-In/ Insert Hoods

Applies to the following model: IN2630SQB-700-1

In the image below, the bottom of the range hood is facing down and the view is from the front of the hood. The electrical wires are at the top and bottom-left of the range hood body. This is 12” from the bottom of the range hood.






## **KOBE Range Hoods**

*"So Quiet...You Won't Believe It's On!"*


Applies to the following series: IN2636SQB-700, IN26 SQB-1200, INX26 SQB-700-2

In the image below, the bottom of the range hood is facing down and the view is from the front of the hood. The electrical wires are at the top and upper-left of the range hood body. This is 12" from the bottom of the range hood.

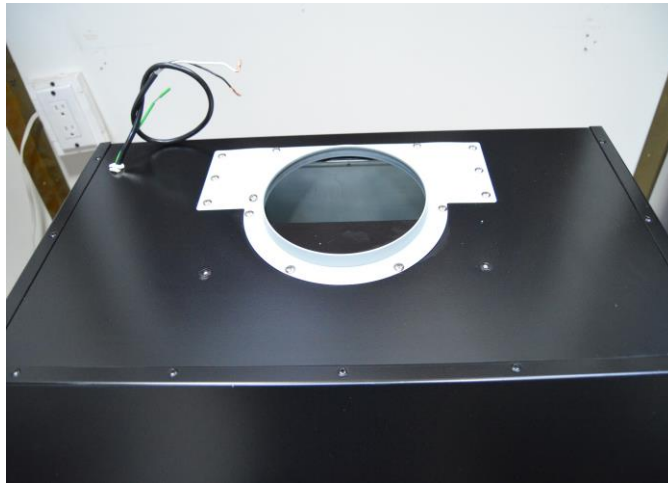

Applies to the following model: INX2730SQB-700-2

In the image below, the bottom of the range hood is facing down and the view is from the front of the hood. The electrical wires are at the top and upper-left of the range hood body. This is approximately 10" from the bottom of the range hood.

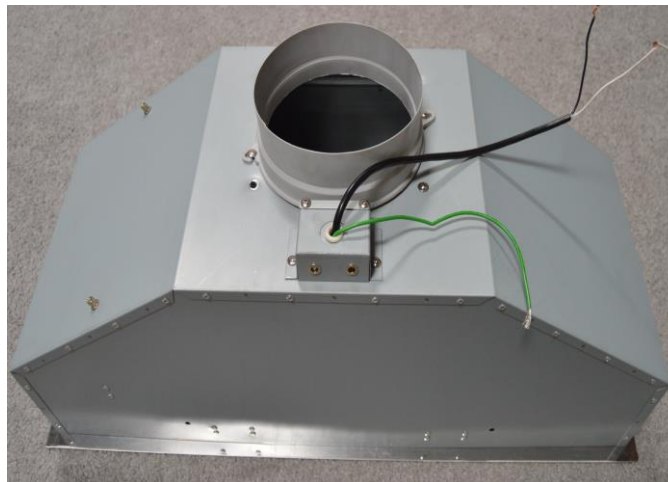



# KOBE Range Hoods

*"So Quiet...You Won't Believe It's On!"*

## Island Hoods

For the two island range hoods below, the electrical wires are inside the duct cover and the duct cover will be positioned in the center of the island range hood body.

Applies to the following series: IS22 SQB-1

Applies to the following series: ISX21 SQB-1



For the island range hood below, the electrical wires are on top and center of the range hood body. The wires will be completely covered by the duct cover once installed.

Applies to the following series: IS23 SQB-1

