

KOBE Range Hoods

"So Quiet... You Won't Believe It's On!"

RAX28 SQB-2 Parts Location and Replacement

This basic guide is to show the parts location of the RAX28 SQB-2 and how to remove or install certain parts.

To see more detailed guidelines, please visit: Kobe Service and Repair

For under cabinet models: RAX2830SQB-2 and RAX2836SQB-2 For wall mount models: RAX2830SQB-WM-2 and RAX2836SQB-WM-2

Overall Snapshot of RAX28 SQB-2



- 1. Blower System (Manual Part #12 See "Parts List" page on manual)
- 2. Controls (Manual Part #s 7, 8, 9, and 10 See "Parts List" page on manual)
 - 3. LED Light (3W) (Manual Part #5 See "Parts List" page on manual)



KOBE Range Hoods "So Quiet...You Won't Believe It's On!"

Removing the Motor Bracket

Warning: Loosen the screw first with a hand tool screw driver.







Figure 2



Figure 3

4. Motor Bracket (Manual Part #11 – See "Parts List" page on manual)




KOBE Range Hoods

"So Quiet...You Won't Believe It's On!"

Accessing the Capacitor and LED Driver



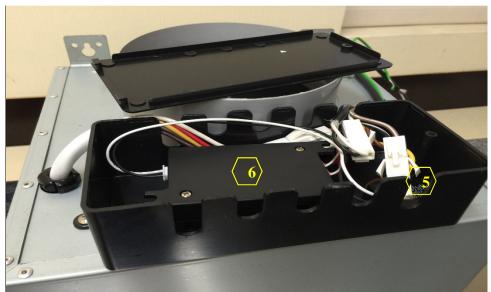

5. Capacitor (Manual Part #2 – See "Parts List" page on manual)
6. LED Light Driver (Manual Part #3 – See "Parts List" page on manual)
7. Capacitor Box (Manual Part #4 – See "Parts List" page on manual)



KOBE Range Hoods "So Quiet...You Won't Believe It's On!"

Removing the Control Switches



Figure 1: Removing the switch



Figure 2

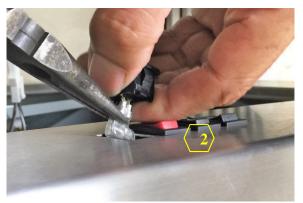


Figure 3



Figure 4

Accessing the LED Light



For a more detailed guideline, visit:

How to Replace LED Lights





KOBE Range Hoods "So Quiet...You Won't Believe It's On!"

Removing the Blower System

Warning:

- 1. Loosen the screw first with a hand tool screw driver.
- 2. Place a support or hold the blower before removing it.



Figure 1



Figure 3

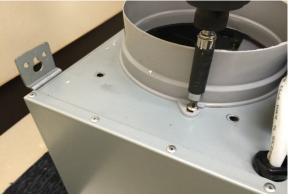


Figure 2

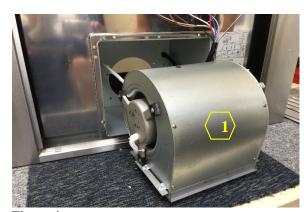


Figure 4

1. Blower System (Manual Part #12 – See "Parts List" page on manual)