

### **KOBE Range Hoods**

"So Quiet ... You Won't Believe It's On!"

### **CXX81 QF-1 Parts Location and Replacement**

This basic guide is to show the parts location of the CXX81 QF-1 and how to remove or install certain parts.

To see more detailed guidelines, please visit: KOBE Service and Repair

For model: CXX8130QF-GBK-1 and CXX8136QF-GBK-1 CXX8130QF-MBK-1 and CXX8136QF-MBK-1

#### Overall Snapshot of CXX81 QF-1




- 1. Blower System (Manual Part #7 See "Parts List" page on manual)
- 2. LED Light (3W) (Manual Part #5 See "Parts List" page on manual)



### **Accessing the Processor Board and Capacitor**



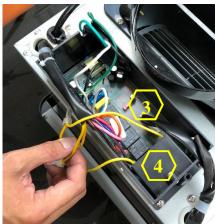

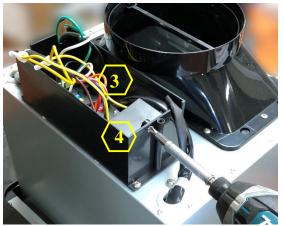


Figure 3 Figure 1 Figure 2

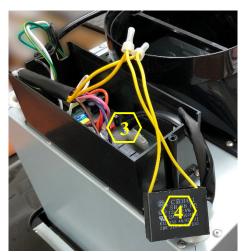




Figure 4

Figure 5

- 3. Processor Board (Manual Part #3 See "Parts List" page on manual)
  - 4. Capacitor (Manual Part #4 See "Parts List" page on manual)



#### **Accessing the LED Light and Control Panel**

#### Warning:

Please remove the glass canopy first before processing below steps.





Figure 1 Figure 2



Figure 3

- 2. LED Light (3W) (Manual Part #5 See "Parts List" page on manual)
  - 5. Control Unit (Manual Part #6 See "Parts List" page on manual)



### Removing LED Light





Figure 1 Figure 2

### Removing the Ring on LED Light







Figure 1

Figure 2

Figure 3

2. LED Light (3W) (Manual Part #5 – See "Parts List" page on manual)



### **Removing the Control Panel**





Figure 2 Figure 1





Figure 4 Figure 3

5. Control Unit (Manual Part #6 – See "Parts List" page on manual)



### **Removing the Blower System**

#### Warning:

Loosen the screw first with a hand tool screw driver. Place a support or hold the blower before removing it.





Figure 2





Figure 3

Figure 4

1. Blower System (Manual Part #7 – See "Parts List" page on manual)