

KOBE Range Hoods

"So Quiet ... You Won't Believe It's On!"

INX29 SQBF-500-1 Parts Location and Replacement

This basic guide is to show the parts location of the INX29 SQBF-500-1 and how to remove or install certain parts. To see more detailed guidelines, please visit: <u>KOBE Service and Repair</u>

For model: INX2930SQBF-500-1 and INX2936SQBF-500-1

Overall Snapshot of INX29 SQBF-500-1



- 1. Blower System (<u>Manual</u> Part #6 See "Parts List" page on manual)
- 2. Control Switch (<u>Manual</u> Part #5 See "Parts List" page on manual)
- 3. LED Light (3W) (Manual Part #4 See "Parts List" page on manual)



Accessing the Control Switch, LED Light and LED Driver





Figure 1

Figure 2







Figure 4

- 2. Control Switch (Manual Part #5 See "Parts List" page on manual)
- 3. LED Light (3W) (Manual Part #4 See "Parts List" page on manual)
 - 4. LED Driver (Manual Part #2 See "Parts List" page on manual)

Page 2 of 7 Version 20180901



<u>Removing the Control Switch</u>

- Version A (metal) see page 4 •
- Version B (plastic) see page 5





Figure 1

Figure 2



Figure 3



Figure 4



Figure 5

2. Control Switch (Manual Part #5 – See "Parts List" page on manual)



<u>Control Switch – Version A (metal)</u>





Figure 1

Figure 2

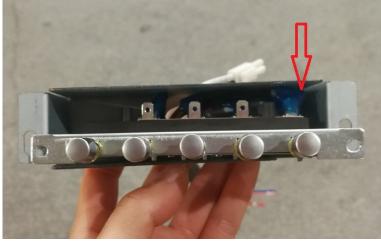


Figure 3

Page 4 of 7 Version 20180901



Control Switch – Version B (plastic)

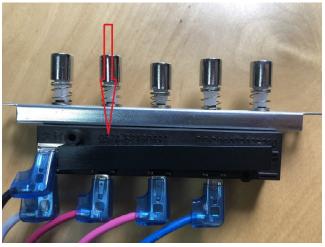


Figure 1



Figure 2

Figure 3

Page 5 of 7 Version 20180901



Removing the LED Light



Figure 1

Figure 2

3. LED Light (3W) (Manual Part #4 – See "Parts List" page on manual)



Removing the Blower System

Warning: Loosen the screw first with a hand tool screw driver. Place a support or hold the blower before removing it.





Figure 1

Figure 2





Figure 4

1. Blower System (Manual Part #6 – See "Parts List" page on manual)

Page 7 of 7 Version 20180901