

KOBE Range Hoods

"So Quiet ... You Won't Believe It's On!"

CH77 SQ6-XX Parts Location and Replacement

This basic guide is to show the parts location of the CH77 SQ6-XX and how to remove or install certain parts.

To see more detailed guidelines, please visit: KOBE Service and Repair

For 30" model: CH7730SQ6-XX / CH7730SQ6-WM-XX For 36" model: CH7736SQ6-XX / CH7736SQ6-WM-XX For 48" model: CH7748SQ6-XX / CH7748SQ6-WM-XX

Overall Snapshot of CH77 SQ6-XX



- 1. Blower System (Manual Part #2 See "Parts List" page on manual)
- 2. LED Light (3W) (Manual Part #11 See "Parts List" page on manual)
 - 3. Control Unit (Manual Part #6 See "Parts List" page on manual)



KOBE Range Hoods

"So Quiet ... You Won't Believe It's On!"

Accessing the Processor Board, UV Sensor, Capacitor, Motor Transformer

Warning: Loosen the screw fist with a hand tool screw driver.





Figure 1 Figure 2

- 4. Processor Board (Manual Part #9 See "Parts List" page on manual)
 - 5. UV Sensor (Manual Part #8 See "Parts List" page on manual)
 - 6. Capacitor (Manual Part #7 See "Parts List" page on manual)
- 7. Motor Transformer (Manual Part #5 See "Parts List" page on manual)

KOBE Range Hoods"So Quiet ... You Won't Believe It's On!"

Removing the Process Board and Accessing the Temperature Sensor

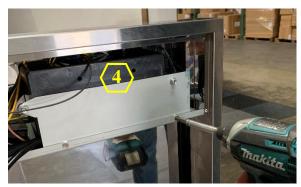




Figure 1 Figure 2







Figure 3 Figure 5 Figure 4



Figure 6

- 4. Process Board (Manual Part #9 See "Parts List" page on manual)
- 8. Temperature Sensor (Manual Part #4 See "Parts List" page on manual)



KOBE Range Hoods

"So Quiet ... You Won't Believe It's On!"

Removing the Control Unit





Warning: Loosen the screw fist with a hand tool screw driver.

Figure 1 Figure 2

3. Control Unit (Manual Part #6 – See "Parts List" page on manual)

Removing the UV Sensor





Figure 1

Figure 2

5. UV Sensor (Manual Part #8 – See "Parts List" page on manual)

Accessing the LED Light



For a more detailed guideline, visit: How to Replace LED Lights

Page 4 of 5 Version 20190612



KOBE Range Hoods"So Quiet ... You Won't Believe It's On!"

Removing the Blower System

Warning:

- 1. Loosen the screw first with a hand tool screw driver.
- 2. Place a support or hold the blower before removing it.



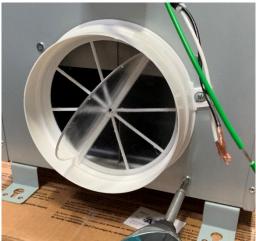


Figure 2 Figure 1



Figure 3

1. Blower System (Manual Part #2 – See "Parts List" page on manual)