



KOBE Range Hoods

"So Quiet...You Won't Believe It's On!"



IMPORTANT NOTICE

Duct Cover Installation Guide for CHX38 SQBD-WM-3 Series

This guide is to show how to install the CH1120DC-1 duct cover onto the CHX38 SQBD-WM-3 hood body. Applicable only to models CHX3830SQBD-WM-3 and CHX3836SQBD-WM-3. For guidelines on other models, please visit www.koberangehoods.com > Customer Support > Service and Repair > Duct Covers Installation.


Step 1:

The top of the hood body has six pre-drilled holes; however, only two holes (shown in the center image with two yellow circles) are completely open and accessible. The other four are blocked by a metal inside.

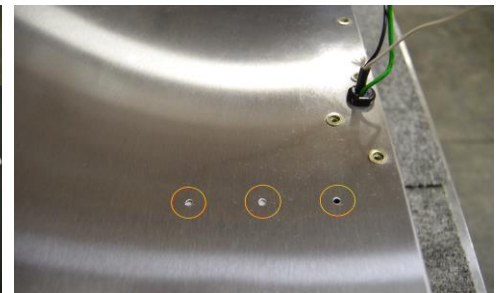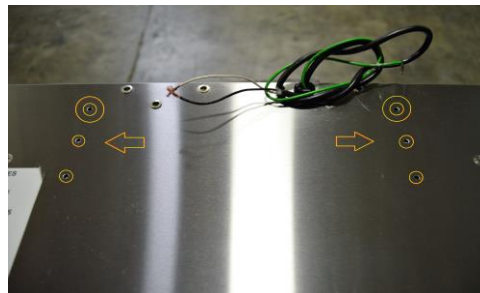

Step 2:

Find the provided materials: two duct cover support (L-shaped bracket) and six self-drilling SMS screws. Align the duct cover support brackets to the holes and attach to the hood body by securing the screws using an electric drill. Note that the four blocked holes can be drilled open by the self-drilling SMS screws.

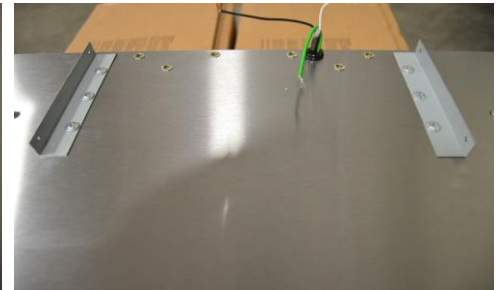

Step 3:

Align the duct cover onto the duct cover support brackets and attach the four screws using an electric drill. This will fasten the duct cover in place.

