



KOBE Range Hoods



"So Quiet...You Won't Believe It's On!"

Rear Exhaust Guide

This guide is for applicable Kobe range hoods (see page 5 for list of series) that have the top round exhaust, top 3-1/4" x 10" rectangular exhaust, and a rear 3-1/4" x 10" rectangular exhaust. Please use this guide if you would like to use the rear exhaust instead of the top exhaust.


Step 1:

The top part of the range hood has an open, round exhaust and a covered 3-1/4" x 10" rectangular exhaust (which is partly occupied by the round exhaust). Unscrew the top vent cover.

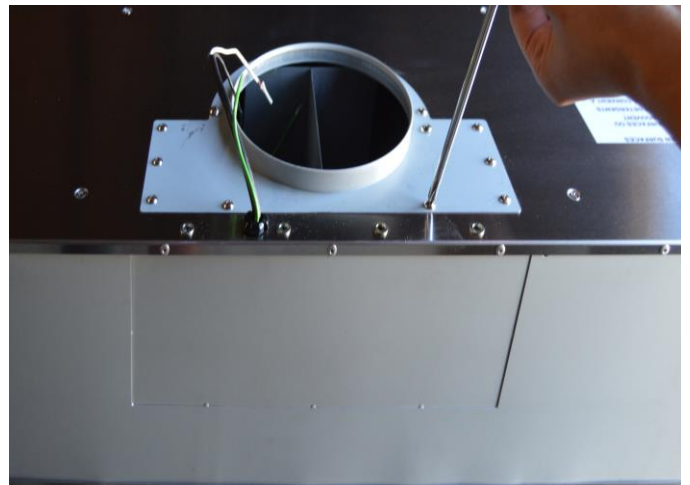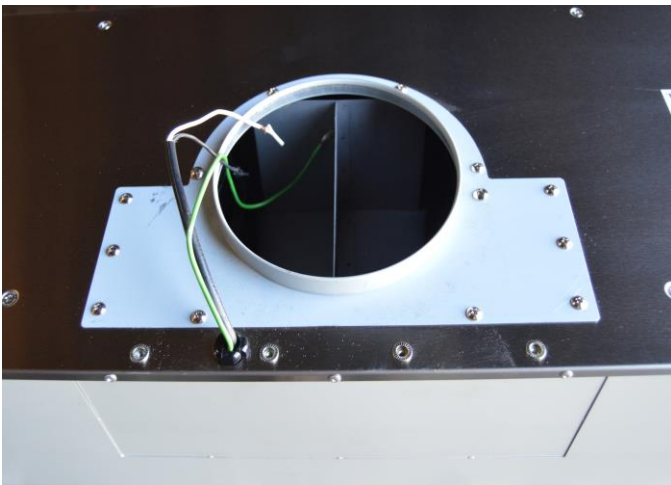

Step 2:

After all screws have been removed, take off the top vent cover.

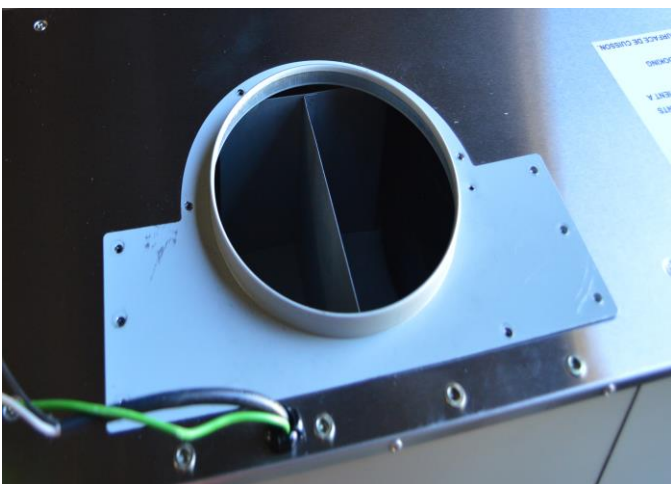




KOBE Range Hoods

"So Quiet...You Won't Believe It's On!"


Step 3:

The top exhaust will be left open for now. In this guide, the range hood has been turned upside down. It is not necessary to turn the range hood upside down but when doing so, be careful as this may scratch the body of the hood. Locate the outer rear vent cover (pointed by the arrow in the image on the right).

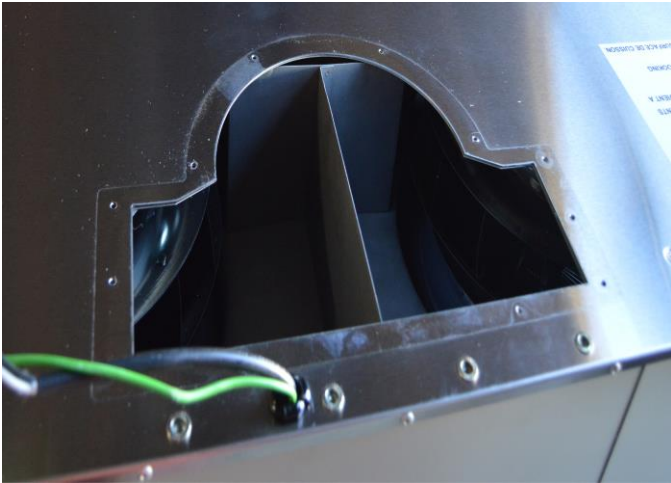

Step 4:

Remove completely the outer rear vent cover. This can be done by pushing it with your hands or by using a small rubber mallet. The outer rear vent cover that has been removed can be discarded.

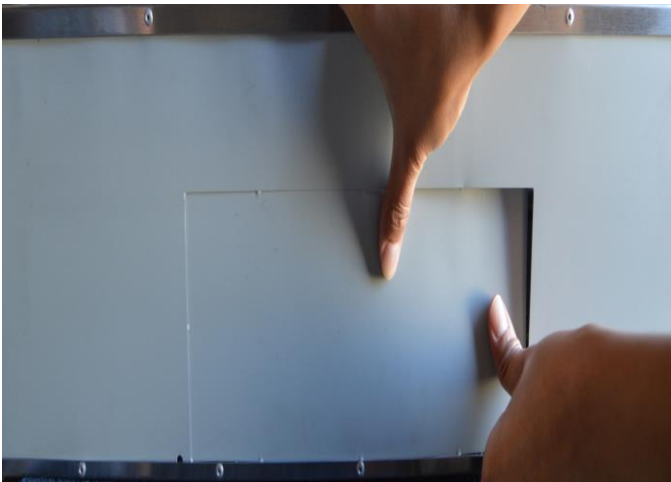



KOBE Range Hoods

"So Quiet...You Won't Believe It's On!"

Step 5:

Inside the hood, there will be an inner, rectangular rear vent cover. Unscrew the inner rear vent cover.



Step 6:

Remove the inner rear vent cover. **DO NOT** discard the inner rear vent cover as it will be used to cover the top exhaust.







KOBE Range Hoods

"So Quiet...You Won't Believe It's On!"


Step 7:

At this point, both the top and rear exhausts are open. Find the top vent cover (has a covering for the half-circle part) and the 3-1/4" x 10" rectangular exhaust that were provided in the carton. Note that there is a single screw taped on the 3-1/4" x 10" rectangular exhaust. This screw will be used to cover the top exhaust—a total of 14 screws, all of which are provided, will be needed. Note: Top Vent Cover (TVC20) must be purchased separately for some models.

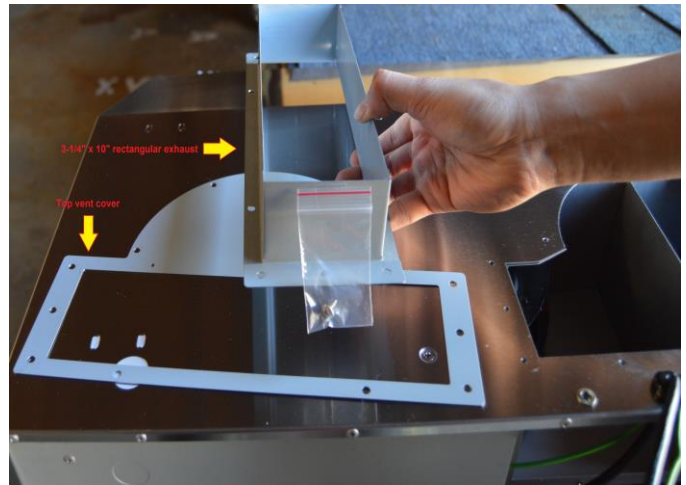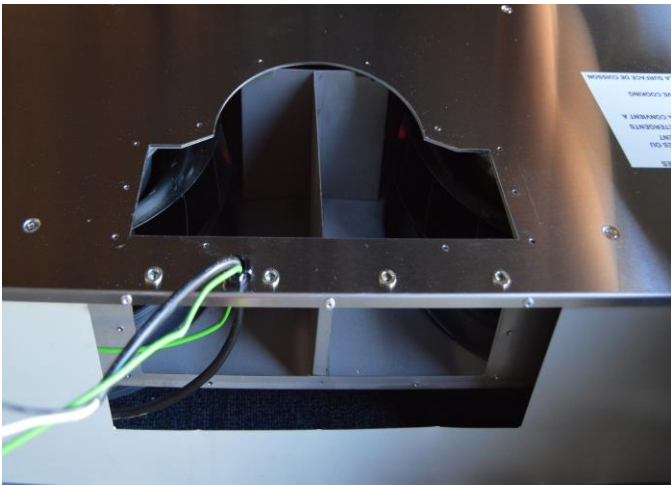

Step 8:

Place the top vent cover on the top exhaust and use the inner rear vent cover that was removed (in step 6) from the rear exhaust to cover the top rectangular exhaust.

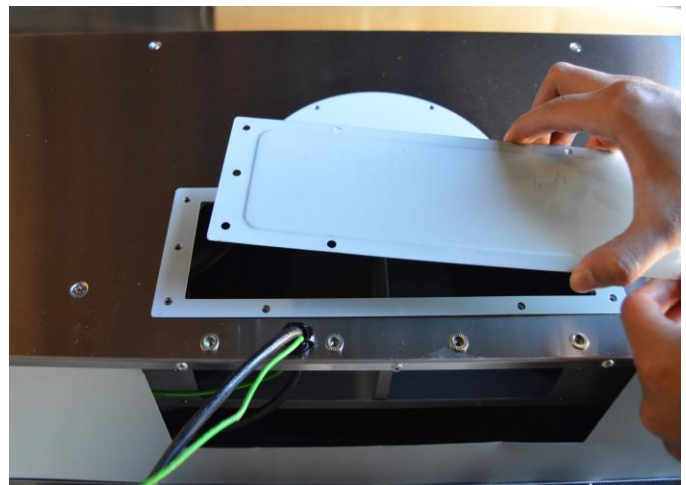





KOBE Range Hoods

"So Quiet...You Won't Believe It's On!"


Step 9:

The top exhaust should now be covered completely. Use the 13 screws that were removed in step 1 plus the additional screw that was taped to the 3-1/4" x 10" rectangular exhaust to attach the top vent covers.

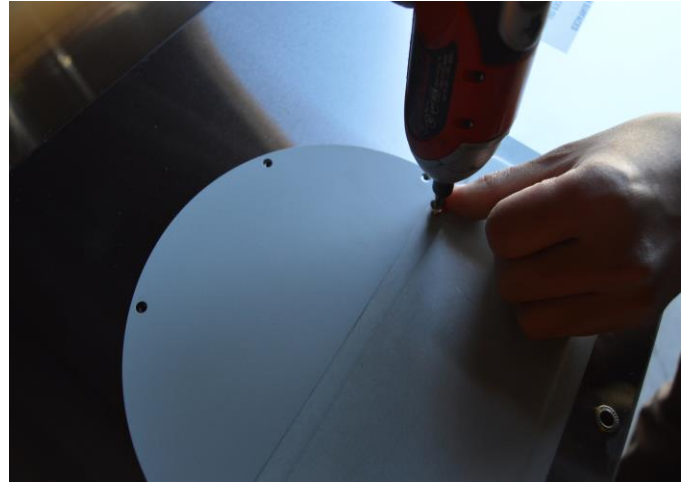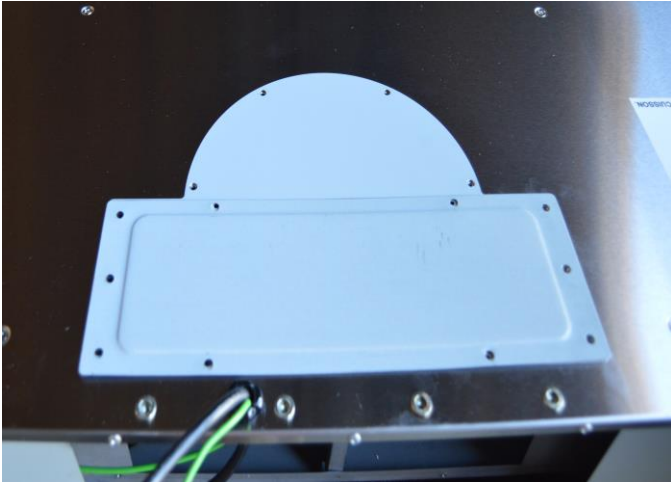

Step 10:

The 3-1/4" x 10" rectangular exhaust that was mentioned in step 7 will be used for the rear exhaust. Screw the 3-1/4" x 10" rectangular exhaust onto the rear of the hood. Finally, the ducting can now be installed onto the rear exhaust. Note that the duct is not provided with the range hood.

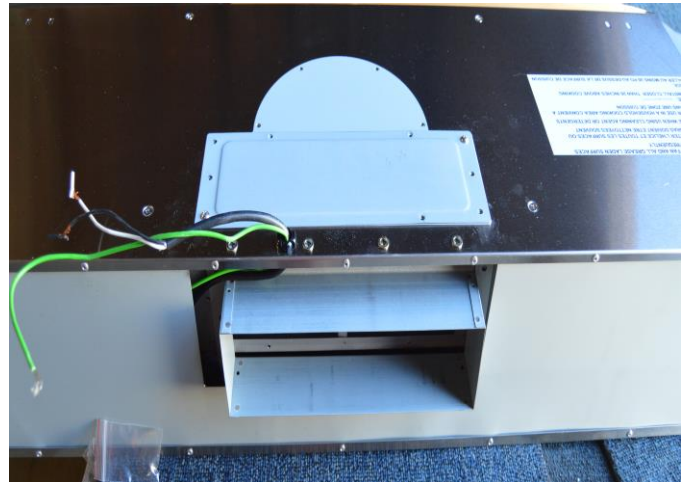

Applicable Series: CH22 SQ-1, CH22 SQB-1, CH27 SQB-1, CH77 SQB-1, CH91 SQB-1, CHX20 SQB-1, CHX22 SQB-1, CHX38 SQB-2, CHX38 SQBD-3, CHX79 SQB-1, CHX91 SQB-1