

# KOBE®

## KOBE Range Hoods

### Brillia Series

Model No.

RAX9430SQB-1 (30")


RAX9430SQB-DC30-1 (30")

RAX9430SQB-DC46-1 (30")

RAX9436SQB-1 (36")

RAX9436SQB-DC30-1 (36")

RAX9436SQB-DC46-1 (36")

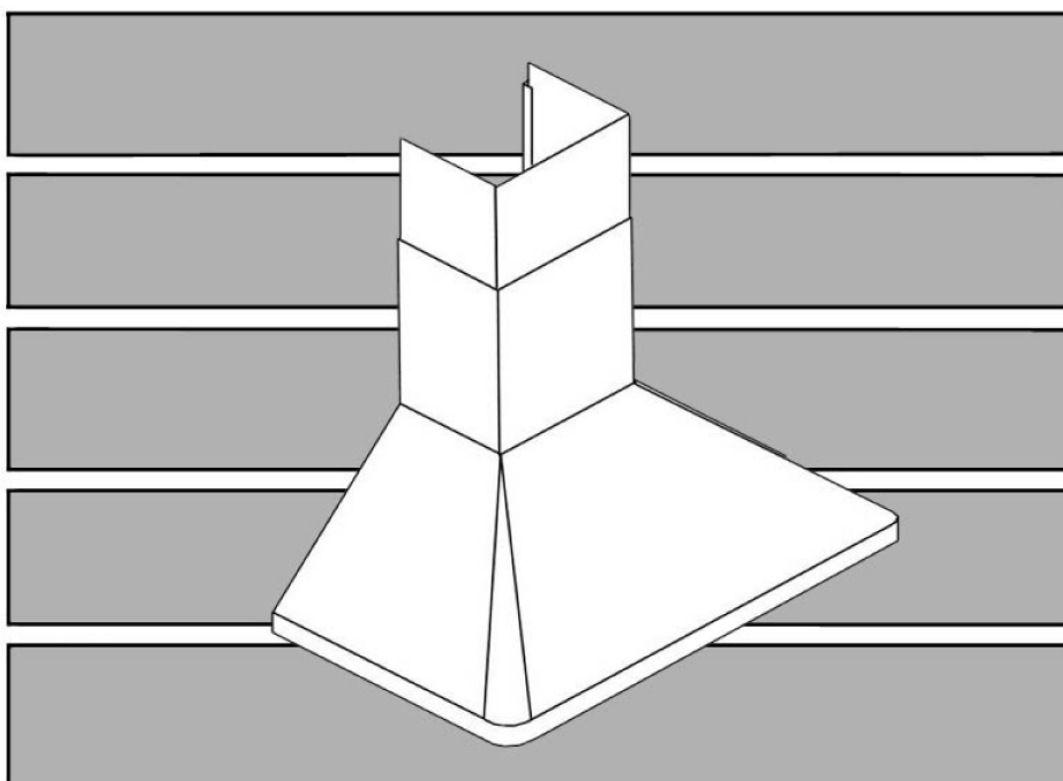

INSTALLATION INSTRUCTIONS  
AND OPERATION MANUAL

# IMPORTANT READ THIS FIRST

## READ BEFORE INSTALLATION

1. Carefully check all contents of packages.
2. Thoroughly inspect the unit for any shipping damages, cosmetic damages or defects.
3. Have a certified contractor/electrician test the unit before installation.

## IF THERE IS ANY PROBLEM:

1. **DO NOT INSTALL THE UNIT AND KEEP ALL ORIGINAL PACKAGING MATERIAL.**
2. Have your original invoice as proof of purchase and product serial number ready.
3. Contact your merchant for product replacement due to shipping damages, cosmetic damages or defects.
4. For all other issues, call 1-877-BUY-KOBE (289-5623), or e-mail to [info@koberangehoods.com](mailto:info@koberangehoods.com) .

## NO RETURN, NO REFUND, NO EXCHANGE IF:

1. PRODUCT HAS BEEN INSTALLED
2. KNOCK-OUT HOLES HAVE BEEN PUNCTURED
3. MISSING ORIGINAL PACKAGING MATERIAL  
AND/OR PARTS

# **[ENGLISH]**

- READ AND SAVE THESE INSTRUCTIONS -

## **CONTENTS**

|                                     |    |
|-------------------------------------|----|
| IMPORTANT SAFETY INSTRUCTIONS ..... | 1  |
| COMPONENTS OF PACKAGE.....          | 3  |
| INSTALLATION .....                  | 4  |
| OPERATING INSTRUCTIONS.....         | 7  |
| MAINTENANCE .....                   | 8  |
| SPECIFICATIONS .....                | 9  |
| MEASUREMENTS & DIAGRAMS.....        | 10 |
| PARTS LIST.....                     | 12 |
| CIRCUIT DIAGRAM.....                | 14 |
| TROUBLE SHOOTING .....              | 15 |
| WARRANTY .....                      | 16 |
| WARRANTY INFORMATION FORM.....      | 18 |

- READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING -

ALL WIRING MUST BE DONE BY A PROFESSIONAL AND IN  
ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES



## IMPORTANT SAFETY INSTRUCTIONS

- PLEASE READ THIS SECTION CAREFULLY BEFORE INSTALLATION -

**⚠WARNING:** TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY, OBSERVE THE FOLLOWING:

- 1) Installation and electrical wiring must be done by qualified professionals and in accordance with all applicable codes and standards, including fire-rated construction.
- 2) When cutting or drilling into wall or ceiling, be careful not to damage electrical wiring or other hidden utilities.
- 3) Ducted fans must be vented to the outside.
  - a) Before servicing or cleaning unit, open the light panel and SWITCH POWER OFF AT SERVICE PANEL.
  - b) Clean all grease laden surfaces frequently. To reduce the risk of fire and to disperse air properly, make sure to vent air outside. DO NOT vent exhaust air into wall spaces, attics, crawl spaces or garages.

NOTE - This warranty is void without an authorized agent's receipt or if unit is damaged due to misuse, poor installation, improper use, mistreatment, negligence or any other circumstances beyond the control of KOBE authorized agents. Any repair carried out without the supervision of KOBE authorized agents will automatically void the warranty.

- KOBE will not be held responsible for any damages to personal property or real estate or any bodily injuries whether caused directly or indirectly by the range hood.

**⚠WARNING:** TO REDUCE THE RISK OF PERSONAL INJURY IN THE EVENT OF A RANGE TOP GREASE FIRE:

1. Keep all fan, baffle/spacer/filter/oil tunnel/oil container and grease-laden surfaces clean. Grease should not be allowed to accumulate on fan, baffle/spacer/filter/oil tunnel/oil container.
2. Always turn hood ON when cooking.
3. Use high settings on cooking range ONLY when necessary.
4. Do not leave cooking range unattended when cooking.
5. Always use cookware and utensils appropriate for the type and amount of food prepared.
6. Use this unit only in the manner intended by the manufacturer.
7. Before servicing, switch power off at service panel and lock service panel (if possible) to prevent power from switching on accidentally.
8. Clean ventilating fan frequently.

### **What to Do In The Event Of a Range Top Grease Fire**

- SMOTHER FLAMES with a tight fitting lid, cookie sheet, or metal tray, and then turn off the burner. KEEP FLAMMABLE OR COMBUSTIBLE MATERIAL AWAY FROM FLAMES. If the flames do not go out immediately, EVACUATE THE AREA AND CALL THE FIRE DEPARTMENT or 911.
- NEVER PICK UP A BURNING PAN – You May Get Burned.
- DO NOT USE WATER, including wet dishcloths or towels – a steam blast will result.
- Use an extinguisher ONLY if:
  - a) You have a Class A, B, C extinguisher and know how to operate it.
  - b) The fire is small and contained in the area where it started.
  - c) The fire department has been called.
  - d) You can fight the fire with your back to an exit.

### **What to Do If You Smell Gas**

- Extinguish any open flame.
- Do not try to turn on the lights or any type of appliance.
- Open all doors and windows to disperse the gas. If you still smell gas, call the Gas Company and Fire Department right away.

## **⚠ CAUTION**

- 1) For general ventilation use only. Do not use to exhaust hazardous or explosive materials and vapors.
- 2) To reduce the risk of fire, use only metal ductwork. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) to prevent back drafting.
- 3) Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and code authorities.
- 4) Activating any switch on may cause ignition or an explosion.
- 5) Due to the size and weight of this hood, installation by 2 persons is recommended.

### **⚠ WARNING**



**ELECTRICAL SHOCK HAZARD – Can result in serious injury or death. Disconnect appliance from electric power before servicing. If equipped, the fluorescent light bulb contains small amounts of mercury, which must be recycled or disposed of according to Local, State, and Federal Codes.**


## COMPONENTS OF PACKAGE

(Must keep all material for returns or refunds)

### Range Hood Box

- {A} KOBE Range Hood (with RA092DC-1)
- {B} Warranty Registration Card
- {C} Quick Reference Guide
- {D} Baffle Filter x 2 (30" hood)  
x 3 (36" hood)
- {E} Hood Mounting Bracket
- {F} 6" Round Plastic Collar
- {G} Duct Cover Mounting Bracket
- {H} Screws Package
- {I} Wire Cap x 3
- {J} Screws Package


{A}

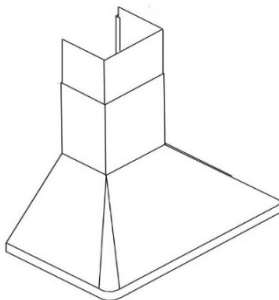


{B}



{C}

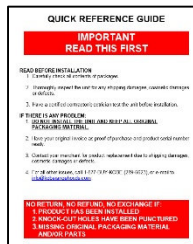


{D}

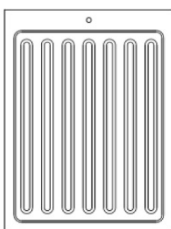

Knob attached to baffle filter

{E}

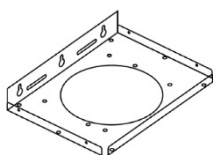


\*Pre-installed

{F}



\*Pre-installed

{G}



{H}




3/16" x 3/8" (6 PCS)

{I}



Wire caps (3)

{J}

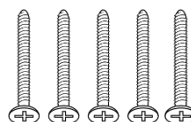


M4 x 1-1/2" (5)

### Extension Duct Cover RA0930DC (Included in RAX94 SQB-DC30-1 ONLY)

#### {K} Duct Cover Extension Model No.: RA0930DC

{K}

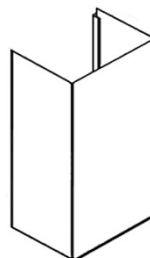

### Extension Duct Cover RA0946DC (Included in RAX94 SQB-DC46-1 ONLY)

#### {L} Duct Cover Extension Model No.: RA0946DC

{L}



◆ FOR MORE INFORMATION, PLEASE VISIT OUR WEBSITE [www.koberangehoods.com](http://www.koberangehoods.com) OR CONTACT KOBE RANGE HOODS AT (626) 775-8880.

## INSTALLATION


PLEASE READ ENTIRE INSTRUCTIONS BEFORE PROCEEDING

### Calculation before Installation

To calculate installation, please refer to TABLE 1. (All calculation in inches.)

**TABLE 1**

A = Height of Floor to Ceiling  
B = Height of Floor to Counter Top  
(Standard: 36")  
**C = Preferred Height of Counter Top  
to Hood Bottom (Minimum  
26" to 30")**  
D = Height of Hood  
E = Height of Duct Cover [F – D]  
F = Height of the Hood Installation  
[A – (B+C)]

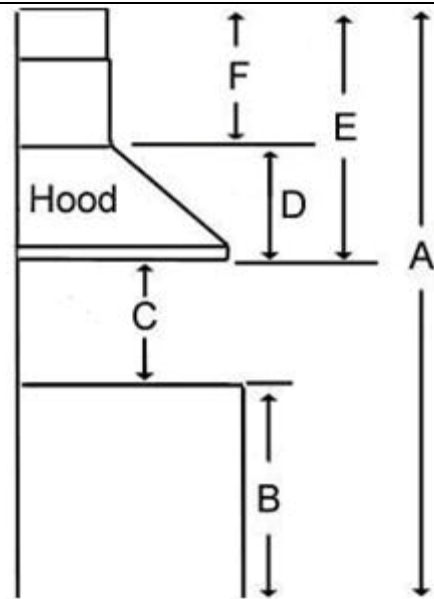

### **⚠ SAFETY WARNING**

HOOD MAY HAVE VERY SHARP EDGES; PLEASE WEAR PROTECTIVE GLOVES IF REMOVING ANY PARTS FOR INSTALLING, CLEANING OR SERVICING.

NOTE: BE CAREFUL WHEN USING ELECTRICAL SCREWDRIVER, DAMAGE TO THE HOOD MAY OCCUR.

## Preparation before Installation

NOTE: TO AVOID DAMAGE TO YOUR HOOD, PREVENT DEBRIS FROM ENTERING THE VENT OPENING.

- Decide the location of the venting pipe from the hood to the outside. Refer to Figure 1.
- A straight, short venting run will allow the hood to perform more efficiently.
- Try to avoid as many transitions, elbows, and long run as possible. This may reduce the performance of the hood.
- Temporarily wire the hood to test for proper operation before installing. If the hood does not operate, check the circuit breaker or house fuse. If the hood is still not working, disconnect power supply and check the continuity of all wire connections.
- Peel protective film off the hood (if any).
- Use duct tape to seal the joints between pipe sections.
- If necessary, prepare back wall frame with cross framing lumber for secure installation. Using references on Table 1 and measurements on page 10-11, decide the level of the lumber. Refer to Figure 2.

Figure 1


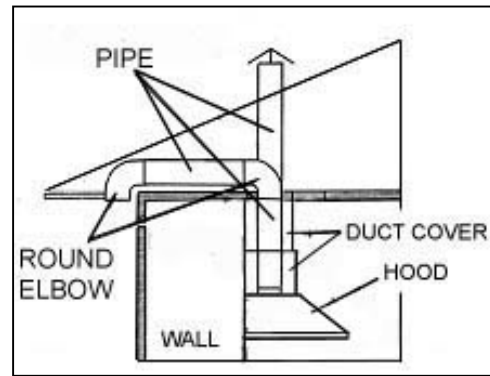


Figure 2

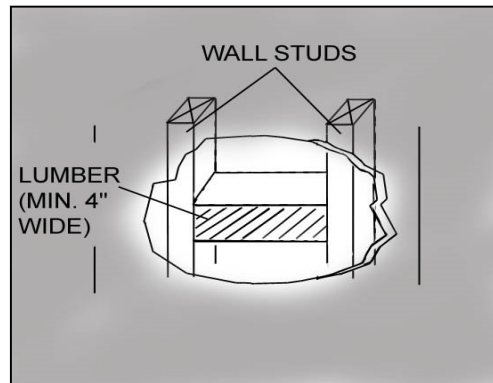

## Hood Installation


**⚠ CAUTION: USE HAND TOOLS ONLY. DO NOT OVER TIGHTEN SCREWS. IT MAY CAUSE DAMAGE TO THE HOOD.**

**⚠ CAUTION: If moving the cooking range is necessary to install the hood, turn off the power in an electric range at the main electrical box. SHUT OFF THE GAS BEFORE MOVING A GAS RANGE. And use a protective covering to protect cooktop and/or countertop from damage.**

1. Using references on Table 1 and measurements on page 10-11, mark the leveling point of the hood. Position mounting screws (provided) on the wall, leaving 1/8" away from the wall as shown in Figure 3.
2. Align Hood-Mounting Bracket to the three screws on the wall and hook hood into place. Tighten screws to secure hood to the wall.

**⚠ CAUTION: MAKE SURE THE HOOD IS SECURE BEFORE RELEASING.**

Figure 3

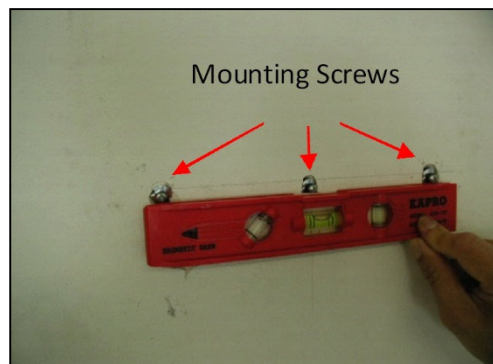



### Wiring to Power Supply

**⚠ THIS RANGE HOOD MUST BE PROPERLY GROUNDED. MAKE SURE THIS IS DONE BY QUALIFIED ELECTRICIAN IN ACCORDANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL CODES. BEFORE CONNECTING WIRES, SWITCH POWER OFF AT SERVICE PANEL AND LOCK SERVICE PANEL TO PREVENT POWER FROM BEING SWITCHED ON ACCIDENTALLY.**

- If hood is operating normally, connect three wires (black, white and green) to house wires and cap with wire connectors.
- Store wires in the wiring box.

### Ductwork Installation

3. Use steel pipe to connect the exhaust on the hood to the ductwork. Use duct tape to make all joints secure and air tight.

### Duct Cover Installation

4. Mark the position of the Duct Cover-Mounting Bracket {G}. Use reference **E** from Table 1 and measurements on page 10-11. Attach and secure Duct Cover-Mounting Bracket {G} with two screws (provided). Refer to Figure 4. NOTE: Inner duct cover will cover the Duct Cover-Mounting Bracket.
5. Position the entire duct cover up onto the hood.
6. Secure the inner duct cover with two (3/16" x 3/8") screws {H} to the Duct Cover-Mounting Bracket {G}. Shown in Figure 5.
7. Secure the outer duct cover with four (3/16" x 3/8") screws {H} to the Hood Mounting Bracket.

### Install / Uninstall Accessories

8. Place baffle filters underneath the hood. (Figure 6)

### Final Assembly

9. Turn power ON in control panel. Check all lights and fan operation.
10. Leave this Installation Instructions and Operation Manual for the homeowner.


Figure 4




Figure 5



Figure 6

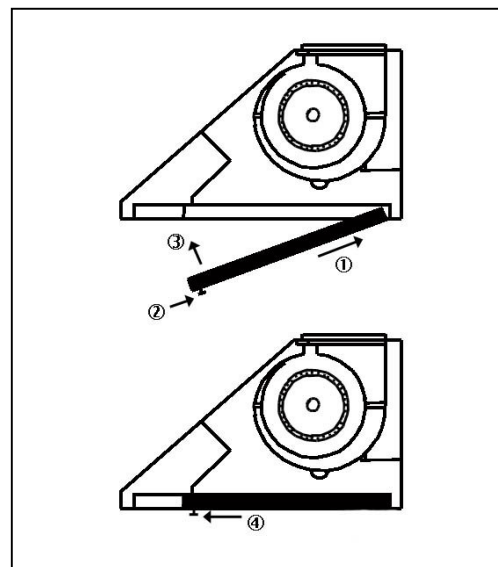

## OPERATING INSTRUCTIONS

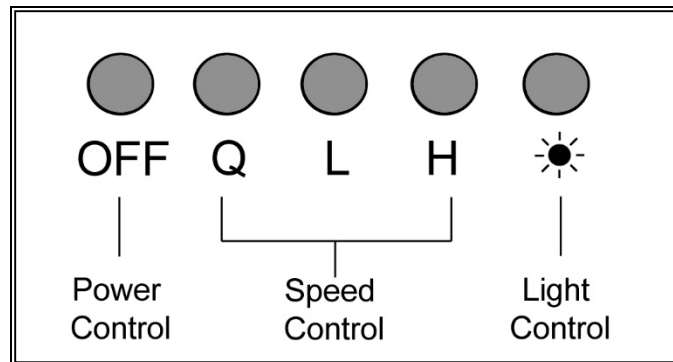

Note: For best results, turn fan on prior to any preparation or cooking and keep fans running while cooking. Adjust speed as needed.

### **To operate the fan function**

- Press button to choose from speed.
  - o Q = QuietMode™ speed
  - o L = Low speed
  - o H = High speed
- Press “OFF” to turn fan off.

### **To operate the light function**

- Press the Light Control to turn lights on and off.

## MAINTENANCE

For optimal performance, clean the range hood surface and baffles regularly.

### To Clean Hood Surface

**CAUTION: NEVER USE ABRASIVE CLEANERS, PADS, OR CLOTHS.**

\*\*\* Regular care will help preserve its fine appearance.

1. Use only mild soap or detergent solutions. Dry surfaces using soft cloth.
2. If hood looks splotchy (stainless steel hood), use a stainless steel cleaner to clean the surface of the hood. Avoid getting cleaning solution onto or into the control panel. Follow directions of the stainless steel cleaner. **Caution: Do not leave on too long as this may cause damage to hood finish.** Use soft towel to wipe off the cleaning solution, gently rub off any stubborn spots. Use dry soft towel to dry the hood.
3. DO NOT allow deposits to accumulate or remain on the hood.
4. DO NOT use ordinary steel wool or steel brushes. Small bits of steel may adhere to the surface and cause rusting.
5. DO NOT allow salt solutions, disinfectants, bleaches, or cleaning compounds to remain in contact with stainless steel for extended periods. Many of these compounds contain chemicals, which may be harmful. Rinse with water after exposure and wipe dry with a clean lint free cloth.

### To Clean Baffle Filter/Oil Tunnel

**CAUTION: DRAIN OIL FROM BAFFLE FILTERS, SPACERS & OIL TUNNEL REGULARLY TO PREVENT OVERFLOW.**

1. Remove all the baffle filters, spacers and oil tunnel.
2. Using a sponge, wash with warm soapy water. Dry completely before returning into place.

**CAUTION: SHARP EDGES**

*(Note: Baffle Filters are top rack dishwasher safe.)*

## SPECIFICATIONS

|                                             |                                                                                                                                                    |                                                                                                                      |                            |
|---------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|----------------------------|
| <b>MODEL / SIZE</b>                         | <u>For 30" model</u><br>RAX9430SQB-1<br>RAX9430SQB-DC30-1<br>RAX9430SQB-DC46-1                                                                     | <u>For 36" model</u><br>RAX9436SQB-1<br>RAX9436SQB-DC30-1<br>RAX9436SQB-DC46-1                                       |                            |
| <b>COLOR</b>                                | 18-Gauge Commercial Grade Stainless Steel                                                                                                          |                                                                                                                      |                            |
| <b>CONSUMPTION / AMPERE</b>                 | 300W / 2.5A                                                                                                                                        |                                                                                                                      |                            |
| <b>NUMBER OF BLOWER</b>                     | 1                                                                                                                                                  |                                                                                                                      |                            |
| <b>DESIGN</b>                               | Seamless / Satin Finish                                                                                                                            |                                                                                                                      |                            |
| <b>BLOWER TYPE</b>                          | Single Horizontal Squirrel Cage                                                                                                                    |                                                                                                                      |                            |
| <b>EXHAUST</b>                              | Top 6" Round                                                                                                                                       |                                                                                                                      |                            |
| <b>CONTROLS</b>                             | Mechanical Push Button                                                                                                                             |                                                                                                                      |                            |
| <b>LIGHTS</b>                               | 3-watt LED light x 2                                                                                                                               |                                                                                                                      |                            |
| <b>HOOD DIMENSION<br/>(W x D x H)</b>       | <b>RAX9430SQB-1 / RAX9430SQB-DC30-1 / RAX9430SQB-DC46-1</b><br>29-3/4" x 20-1/2" x 12-3/16"                                                        |                                                                                                                      |                            |
|                                             | <b>RAX9436SQB-1 / RAX9436SQB-DC30-1 / RAX9436SQB-DC46-1</b><br>35-1/4" x 20-1/2" x 12-3/16"                                                        |                                                                                                                      |                            |
| <b>DUCT COVER DIMENSION<br/>(W x D x H)</b> | <b>RA092DC-1</b><br><b>RA0930DC</b><br><b>RA0946DC</b>                                                                                             | 10-5/8" x 7-7/8" x (16-1/8" ~ 29-1/8")<br>10-5/8" x 7-7/8" x (30-7/16" ~ 44")<br>10-5/8" x 7-7/8" x (47-7/16" ~ 61") |                            |
| <b>OPTIONAL ACCESSORIES<br/>(W x D x H)</b> | <b>1) 30" Stainless Steel Back Panel</b><br>(SSP30) 30" x 1/10" x 32"<br><br><b>2) 36" Stainless Steel Back Panel</b><br>(SSP36) 36" x 1/10" x 32" |                                                                                                                      |                            |
| <b>HOOD WEIGHT (lbs)</b>                    | <b>RAX9430SQB-1 (30")</b><br><b>RAX9436SQB-1 (36")</b>                                                                                             | <u>Net</u><br>34.4<br>37.5                                                                                           | <u>Gross</u><br>44<br>48.5 |
| <b>SPEED</b>                                | <u>QuietMode™</u>                                                                                                                                  | <u>Low</u>                                                                                                           | <u>High</u>                |
| <b>Air Capacity (CFM)</b>                   | 280                                                                                                                                                | 450                                                                                                                  | 680                        |
| <b>Sone* (dB)</b>                           | 1.0                                                                                                                                                | 2.2                                                                                                                  | 5.0                        |

\*One sone is equivalent to the sound of a refrigerator at 40 decibels.


\*\*Specifications subject to change without notice.

## MEASUREMENTS & DIAGRAMS


\*\*\*All inch measurements are converted from millimeters. Inch measurements are estimated.

\*\*\*All measurements in ( ) are millimeters.



**MODEL NO.: RAX9430SQB-1 (30")**  
**RAX9436SQB-1 (36")**

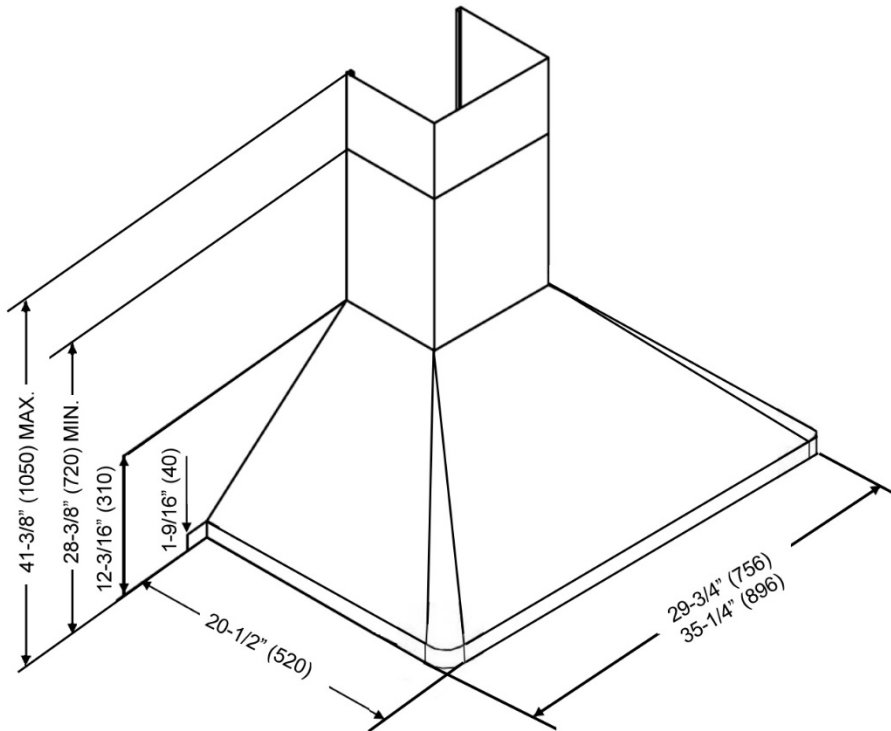


Inner: 15" (380)  
 Outer: 15" (380)

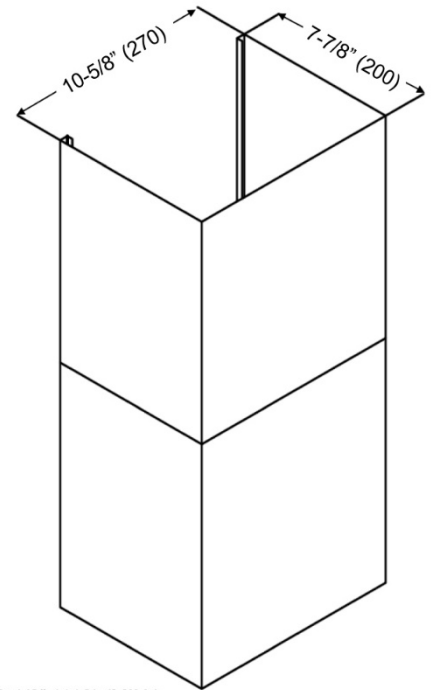

Dimension: 16-1/8" (410) (MIN.)  
 29-1/8" (740) (MAX.)

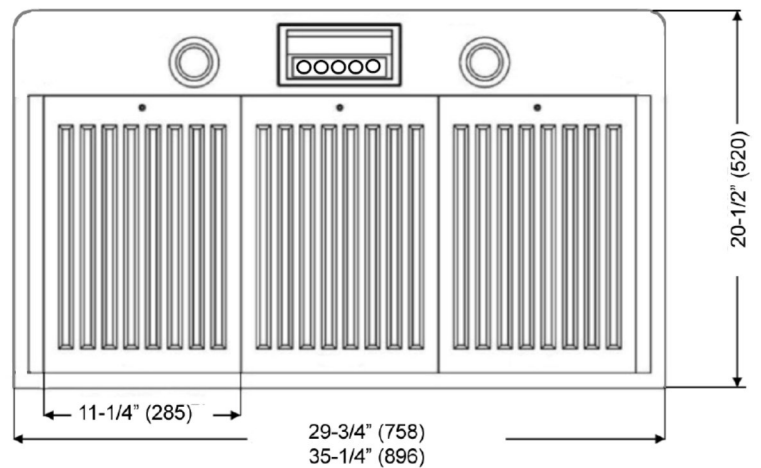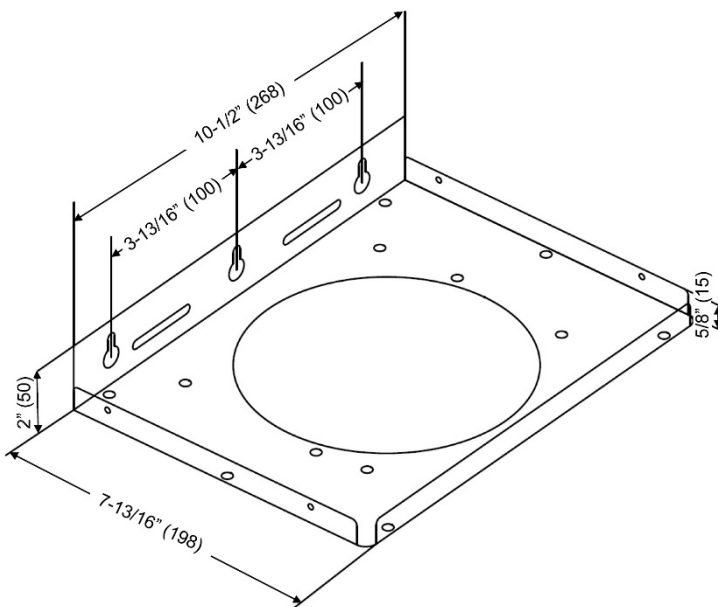


**MODEL NO.: RAX9430SQB-DC30-1 / RAX9436SQB-DC30-1**

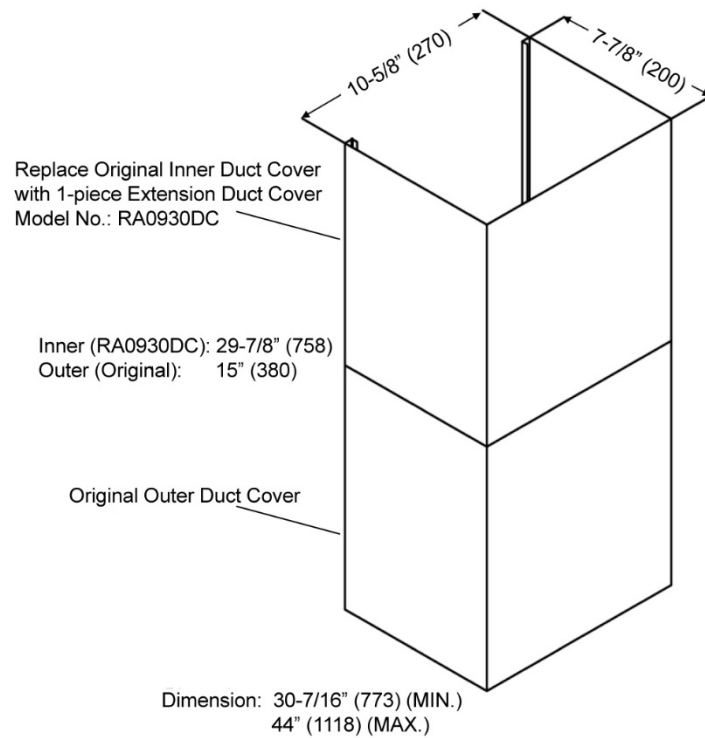

**Extension Duct Cover  
RA0930DC**

**\* For the diagram of hood  
dimension, please refer to  
Page 10.**

**MODEL NO.: RAX9430SQB-DC46-1 / RAX9436SQB-DC46-1**

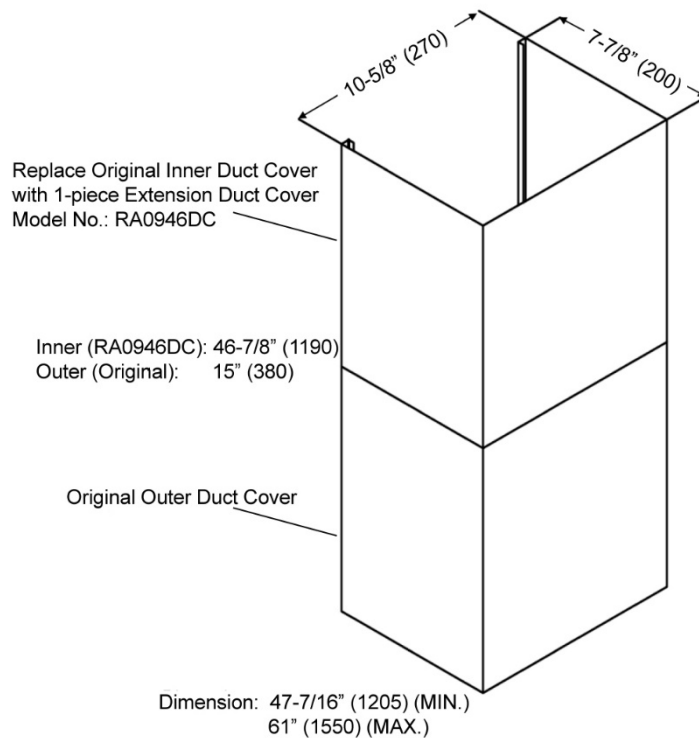

**Extension Duct Cover  
RA0946DC**

**\* For the diagram of hood  
dimension, please refer to  
Page 10.**

## PARTS LIST

### MODEL NO.:

RAX9430SQB-1 (30")

RAX9430SQB-DC30-1 (30")

RAX9430SQB-DC46-1 (30")

RAX9436SQB-1 (36")

RAX9436SQB-DC30-1 (36")

RAX9436SQB-DC46-1 (36")

| NO. | DESCRIPTION                 | MODEL /SIZE | PART NO.           |
|-----|-----------------------------|-------------|--------------------|
| 1   | Duct Cover-Mounting Bracket |             | L1-0203-0092       |
| 2   | Duct Cover                  | RA092DC-1   | 12-09200-61        |
| 3   | 6" Round Plastic Exhaust    |             | L1-0505-0003       |
| 4   | LED Light Driver            |             | L1-0402-D001       |
| 5   | LED Light (3W)              |             | L1-0403-0301       |
| 6   | Control Switch              |             | L1-0405-0301       |
| 7   | Control Panel Support       |             | L1-0207-3830       |
| 8   | Blower System               |             | L1-0302-0120-101RO |
| 9   | Capacitor Support           |             | L1-0201-0092       |
| 10  | Capacitor x 1PCS            |             | L1-0401-0120-04    |
| 11  | Baffle Filter               |             | L1-0214-0122       |

**MODEL NO.:**

**RAX9430SQB-1 (30")**


**RAX9430SQB-DC30-1 (30")**


**RAX9430SQB-DC46-1 (30")**

**RAX9436SQB-1 (36")**

**RAX9436SQB-DC30-1 (36")**

**RAX9436SQB-DC46-1 (36")**

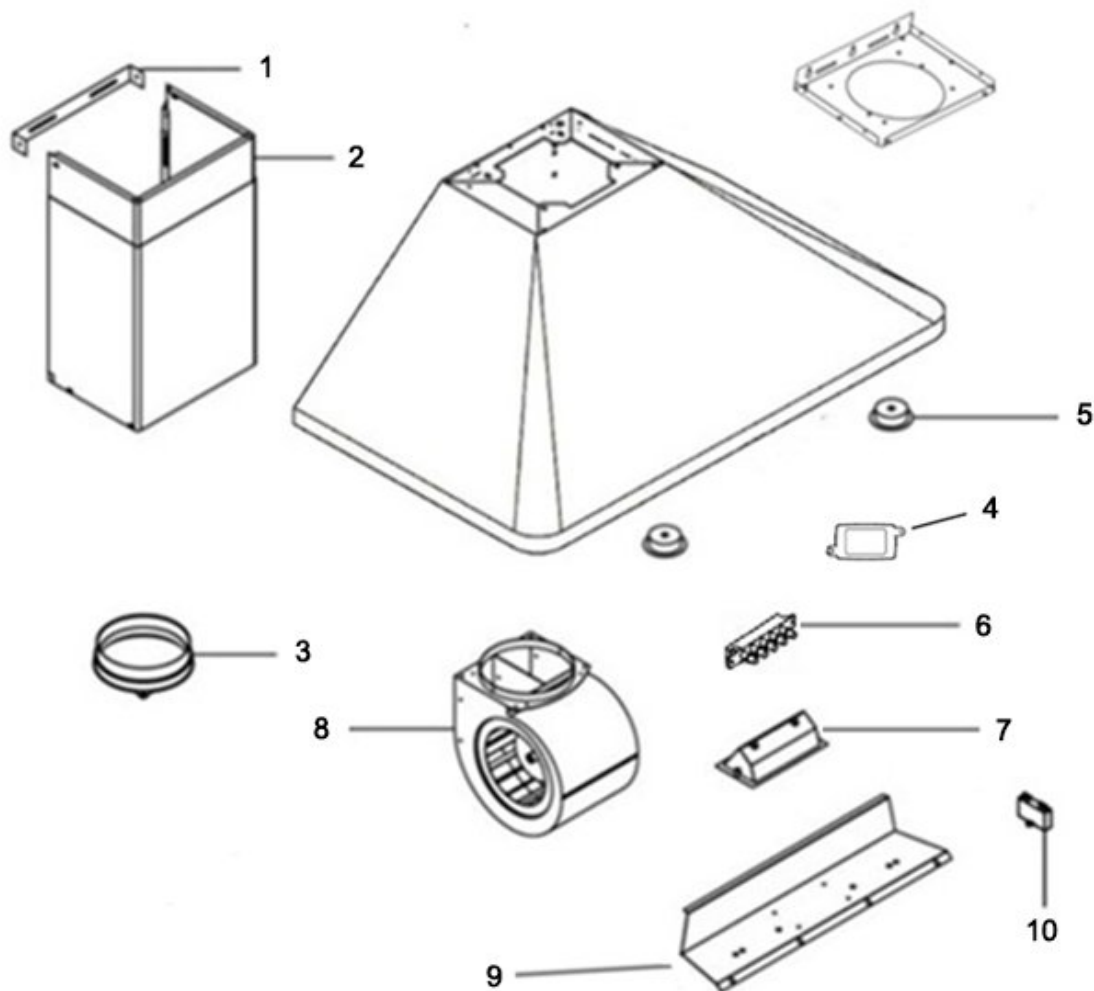
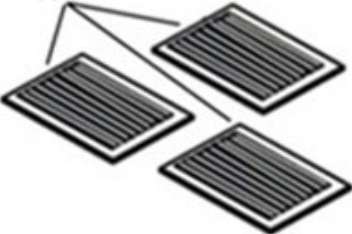
| RAX9430SQB-1 ,<br>RAX9430SQB-DC30-1 ,<br>RAX9430SQB-DC46-1                                    | RAX9436SQB-1 ,<br>RAX9436SQB-DC30-1 ,<br>RAX9436SQB-DC46-1                                     |
|-----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| <p>11</p>  | <p>11</p>  |



## CIRCUIT DIAGRAM

MODEL NO.:

RAX9430SQB-1 (30")


RAX9430SQB-DC30-1 (30")

RAX9430SQB-DC46-1 (30")

RAX9436SQB-1 (36")

RAX9436SQB-DC30-1 (36")

RAX9436SQB-DC46-1 (36")

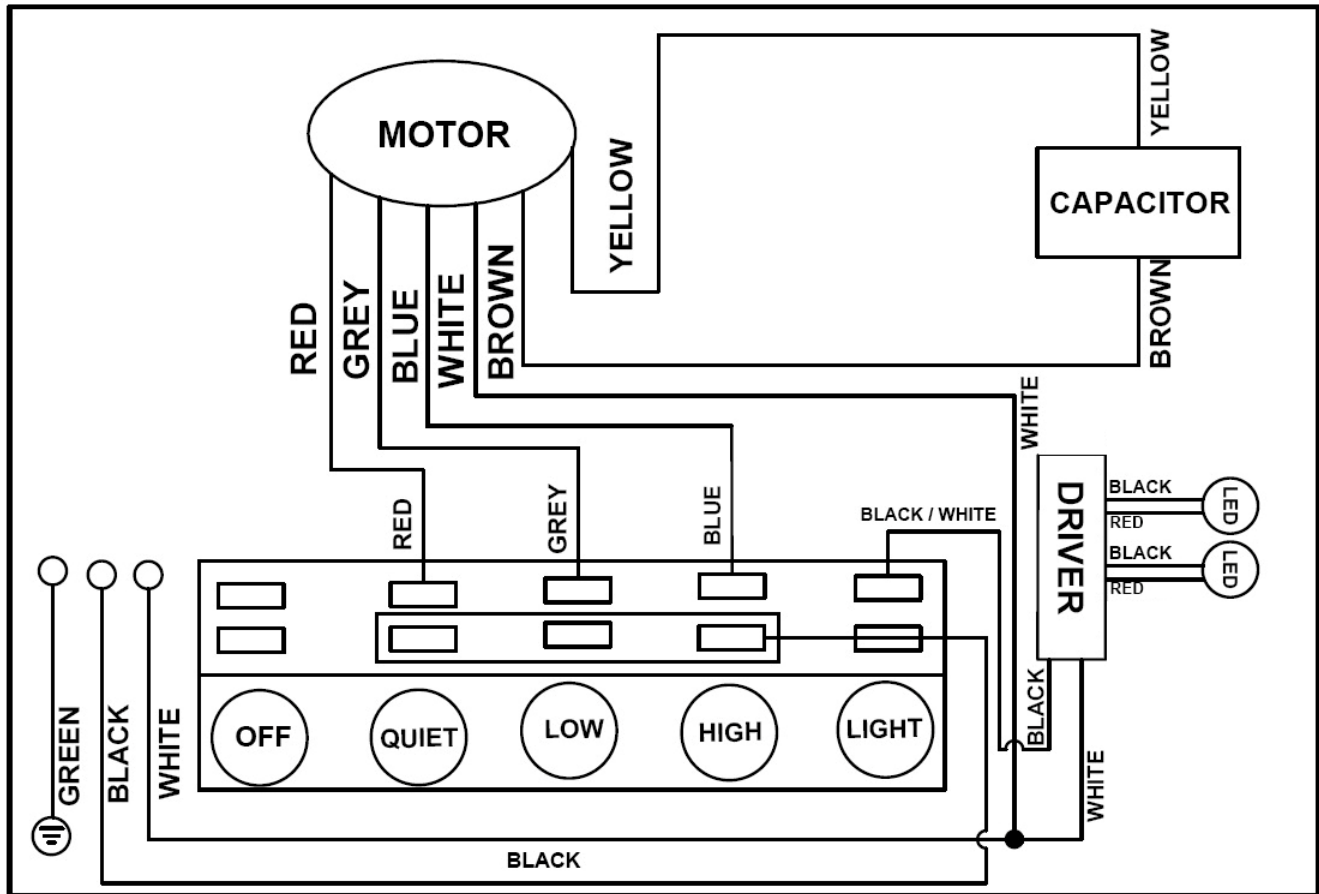

## TROUBLE SHOOTING

| Issue                                                       | Possible Cause                                                                | Solution                                                                                                                                                          |
|-------------------------------------------------------------|-------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| After Installation, both motors and lights are not working. | The power is not on.                                                          | Make sure the circuit breaker and the unit's power is ON. Use a voltage meter to check the power supply.                                                          |
|                                                             | The wire connection is not secure.                                            | Check and tighten wire connection.                                                                                                                                |
|                                                             | The control panel is defective.                                               | Replace the control panel.                                                                                                                                        |
| Lights are working, but motor(s) is not.                    | The motor(s) is defective.                                                    | Replace the motor.                                                                                                                                                |
|                                                             | The capacitor(s) is defective.                                                | Replace capacitor(s).                                                                                                                                             |
|                                                             | The control panel is defective.                                               | Replace the control panel.                                                                                                                                        |
| The range hood is vibrating.                                | The blower system is not secure.                                              | Tighten the turbine impeller/squirrel cage and air chamber.                                                                                                       |
|                                                             | The turbine impeller/squirrel cage is not balanced.                           | Replace the turbine impeller/squirrel cage.                                                                                                                       |
|                                                             | Hood is not secured in place.                                                 | Check the installation of hood, tighten the mounting bracket.                                                                                                     |
| The motor is working, but the lights are not working.       | LED light fixture(s) is defective.                                            | Replace LED light fixture(s)                                                                                                                                      |
|                                                             | The light wiring(s) is loose.                                                 | Check wire continuity from Control Panel to LED Driver to LED light fixture(s).                                                                                   |
|                                                             | The control panel or LED light driver is defective.                           | Replace the control panel or LED light driver.                                                                                                                    |
| The range hood is not venting out correctly.                | The range hood is installed outside of the manufacture recommended clearance. | Adjust the clearance between the range hoods and cook top to 26" to 30". For Island range hood, the clearance between the range hoods and cook top is 30" to 36". |
|                                                             | There is no make-up air inside the house.                                     | Open the window to enhance the performance of the range hood by creating a sufficient make-up air.                                                                |
|                                                             | Obstacle blocking the pipe work.                                              | Remove all obstacles from the duct work.                                                                                                                          |
|                                                             | The pipe size is smaller than the suggested pipe size.                        | Change the ducting according to the manufacture suggestion.                                                                                                       |
| Cold air is coming into the home.                           | The pipe connection is not properly sealed.                                   | Check the pipe installation.                                                                                                                                      |
|                                                             | The damper is not properly installed or is missing from the installation.     | Check the damper installation.                                                                                                                                    |
|                                                             | The damper is not installed.                                                  | Installing the damper will help eliminate air backflow.                                                                                                           |

## **WARRANTY**

### **WARRANTY CERTIFICATE**

**In order to obtain warranty service, you must provide proof of original purchase from a KOBE authorized Dealer. Please keep a copy of your original invoice as proof of purchase.**

#### **ONE-YEAR LIMITED LABOR WARRANTY ON KOBE BRILLIA SERIES:**

For one year from the date of your original invoice from a KOBE authorized dealer, we will repair any parts or components free of charge that failed due to manufacturing defects. KOBE reserves the right to replace, rather than repair the product free of charge at our sole discretion.

It is your sole responsibility to ensure the product is readily accessible for the service technician to perform repairs. **The service technician will not, under any circumstance, remove, alter or modify any fixture built around and/or connected to the product to gain access to perform repairs.**

#### **TWO-YEAR LIMITED PARTS WARRANTY ON KOBE BRILLIA SERIES:**

For two years from the date of your original invoice from a KOBE authorized dealer, we will provide non-consumable replacement parts or components free of charge that failed due to manufacturing defects. Consumable parts such as lights bulbs, filters, fuses, and oil cups are not covered by this warranty.

#### **WHAT IS COVERED:**

This warranty is valid in the United States and Canada. It is non-transferable and applies only to the original purchaser and does not extend to subsequent owner of this product. In Hawaii, Alaska and Canada, this warranty is limited. There may be additional shipping charges for parts and service technician travel costs in remote areas or locations 30 miles outside of KOBE authorized service area.

#### **WHAT IS NOT COVERED:**

1. Normal wear and tear, regular service and maintenance required for the product.
2. Consumable parts such as light bulbs, filters, fuses, and oil cups.
3. Chips, scratches or dents due to abuse or misuse of the product, use of corrosive and abrasive cleaning products.
4. Damages caused by accident, fire, flood and other Acts of God.
5. Services in remote areas or locations 30 miles outside of KOBE authorized service area.
6. Labor cost incurred in connection with the removal of range hood, and reinstallation of replacement range hood, nor does it cover any other contingent expenses.
7. Scratches inside the hood, back of the baffle filter, and inside the duct cover.

#### **THIS WARRANTY WILL BE VOIDED WHEN:**

1. Improper installation and failure to follow installation instructions.
2. Any repair, alteration, modification not authorized by KOBE.
3. Duct alteration, modification and connection.
4. Incorrect electric current, voltage or wiring.
5. Improper usage of the product such as commercially, outdoor or other usage other than its intended purpose which is residential indoor usage only.

6. Product is purchased from an unauthorized KOBE dealer.
7. Product is damaged due to negligence, misuse, abuse, accident.

If we determine that the warranty exclusions listed above applies or if you fail to provide all necessary documentation for warranty service, you will be responsible for all expenses associated with the requested service, including parts, labor, shipping, travelling, and any other expense related to the service request.

**TO REQUEST WARRANTY SERVICE, PLEASE CONTACT KOBE RANGE HOODS SERVICE CENTER:**

**From the 48 contiguous states:**

**Toll Free: 1-877-BUY-KOBE (289-5623)**

**E-Mail: [customer.service@koberangehoods.com](mailto:customer.service@koberangehoods.com)**

**From Alaska, Hawaii, and Canada:**

**TEL: 1-626-775-8880**

**E-Mail: [customer.service@koberangehoods.com](mailto:customer.service@koberangehoods.com)**

## WARRANTY INFORMATION FORM

Fill in the blanks and keep this paper with the **original invoice** in a safe place for future service purpose.

1. Date of purchase : \_\_\_\_\_

2. Model No. : \_\_\_\_\_

3. Serial No. : \_\_\_\_\_

**For warranty service or spare parts purchase contact:**

KOBE Service Center

Toll Free: 1-877-BUY-KOBE (289-5623)

Email: [customer.service@koberangehoods.com](mailto:customer.service@koberangehoods.com)

**For service in Canada and to report a problem, please contact:**

Tel: 1-626-775-8880

Email: [customer.service@koberangehoods.com](mailto:customer.service@koberangehoods.com)

Your notes:



KOBE Range Hoods  
11775 Clark Street  
Arcadia, CA 91006 USA

[www.koberangehoods.com](http://www.koberangehoods.com)

This KOBE hood is made for use in the USA and CANADA only. We do not recommend using this hood overseas as the power supply may not be compatible and may violate the electrical code of that country. **Using a KOBE hood overseas is at your own risk and will void your warranty.**

Cette hotte KOBE est fabriquée pour usage aux États-Unis et au Canada seulement. Il n'est pas recommandé d'utiliser cette hotte à l'étranger puisque l'alimentation électrique pourrait ne pas être compatible et enfreindre le code de l'électricité de ce pays. **L'usage de la hotte KOBE à l'étranger est à votre propre risque et la garantie sera annulée.**

Esta campana de extracción KOBE ha sido fabricada para ser utilizada únicamente en EE.UU. y CANADÁ. No recomendamos la utilización de esta campana en el extranjero debido a que la fuente de energía podría no ser compatible y podría violar el código eléctrico de dicho país. **Utilizar una campana KOBE en el extranjero será a su propio riesgo y anulará la garantía.**

VER.170301

Information subject to change without notice.